



CANNON CLASS DESTROYER ESCORT USS SLATER VERSION

About the Cannon class Destroyer Escort USS Slater version :


Protection of convoys crossing both the Atlantic or Pacific Oceans needed the design of a class of warship specialized in the submarine hunt. The USA developed the Destroyer Escorts, a smaller, less armed and slower unit than the fleet destroyers of the Fletcher class. Of the 507 DEs built, 72 were Cannons. As the possibility of aerial attacks increased, torpedo tubes were eliminated and replaced by four 40mm Bofors guns in single mount, as the twins were not available in sufficient numbers. Cannons proved to be efficient escorts during the war, no less than 54 of them were transferred to occidental navies after the conflict. The last one to be decommissioned was the Rajah Humabon PS-11 of the Philippines Navy in 2018, after 75 years of service!

À propos du Destroyer Escort classe Cannon, version USS Slater :


La protection des convois en Atlantique ou Pacifique nécessitait la création d'une classe de bâtiments spécialisés dans la chasse aux sous-marins. Les États-Unis développèrent les Destroyer Escorts, navires plus petits, moins rapides et plus légèrement armés que les grands destroyers de la classe Fletcher. Parmi les 507 Destroyer Escorts construits, figurent les 72 unités de la classe Cannon, dont la première version, équipée de tubes lance-torpilles est l'objet de ce kit. Ces navires escortèrent efficacement les cargos pendant le conflit, et pas moins de 54 Cannon DE furent transférés après-guerre aux marines occidentales. Le dernier à quitter le service a été le Rajah Humabon PS-11 en 2018 après soixante quinze ans d'activité !

PARTS


RESIN PARTS

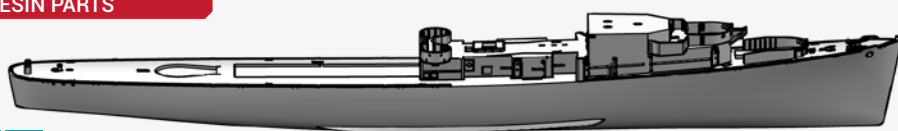

1 x1

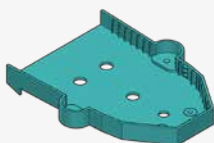

2 x1

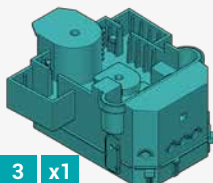

3 x1




4 x1




5 x1



6 x1

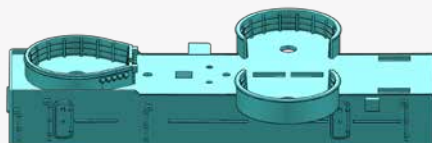


7 x1

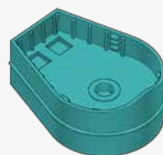

8 x1

3D PRINTED PARTS

BAR A

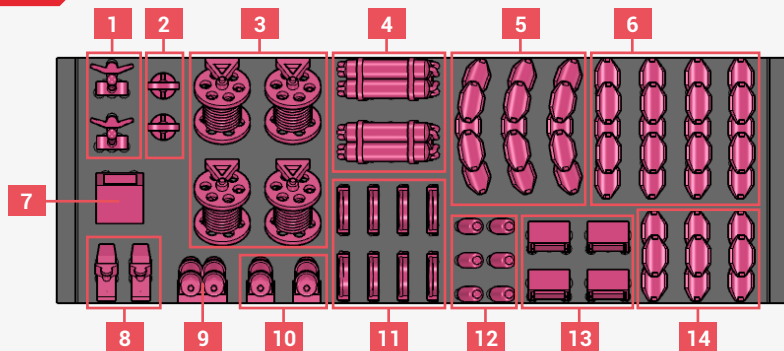

1 x1




2 x1




3 x3



4 x2




5 x2



6 x3




7 x1



8 x1



9 x1



10 x2



11 x7





12 x4





13 x3



14 x2

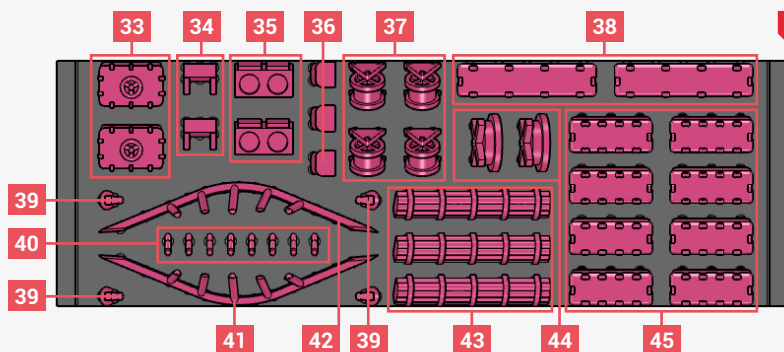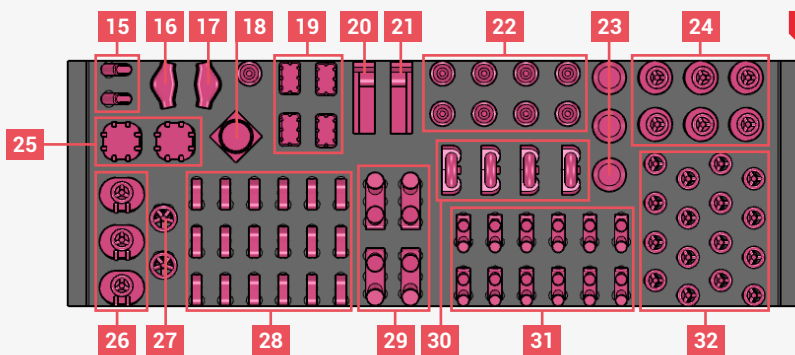

BAR D

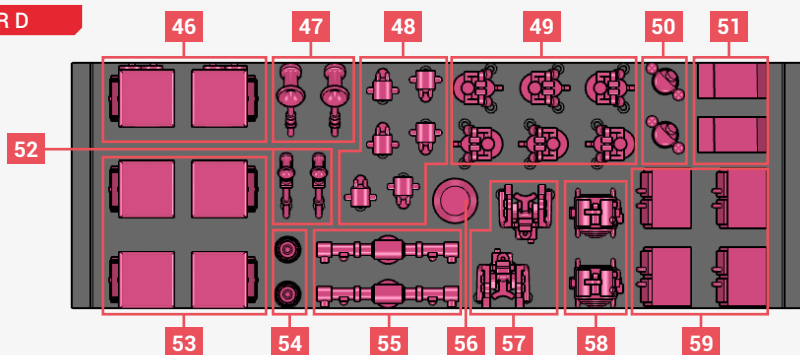

46 x2



47 x1



48 x2



49 x4



50 x1



51 x1



52 x1



53 x4



54 x1




55 x1



56 x1



57 x3




58 x2



59 x2

BAR E

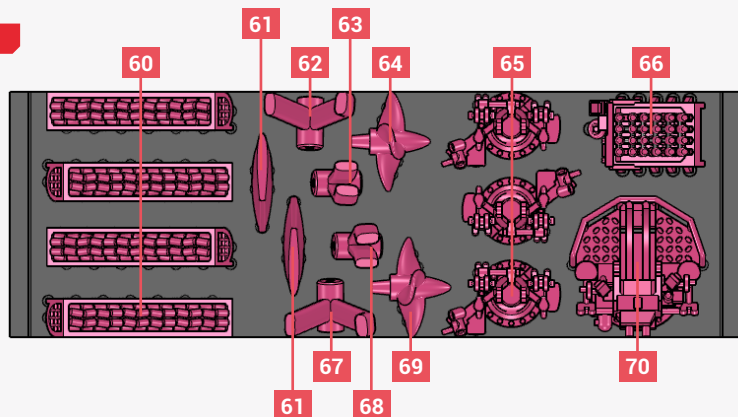

60 x4



61 x2



62 x1




63 x1



64 x1



65 x3



66 x1




67 x1




68 x1



69 x1



70 x3

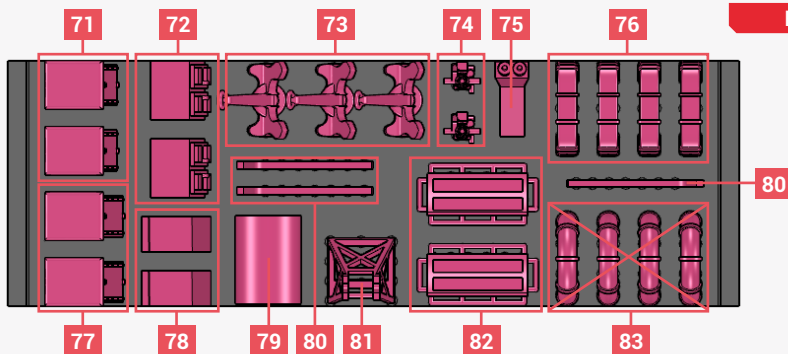

71 x2




72 x2



73 x2



74 x1



75 x1



76 x4



77 x2



78 x2



79 x1



80 x1





81 x1



82 x2




83 x0

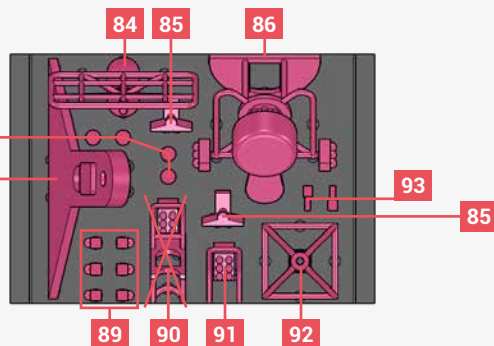

84 x1



85 x1

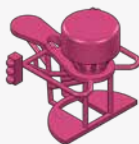

86 x1




87 x2



88 x1



89 x4




90 x0



91 x1





92 x0





93 x1

BAR H

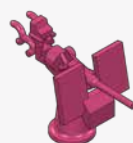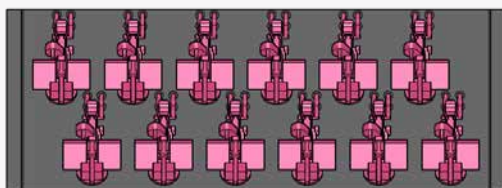

94 x10

BAR I

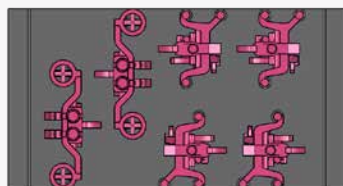


95 x3



96 x3

BAR J

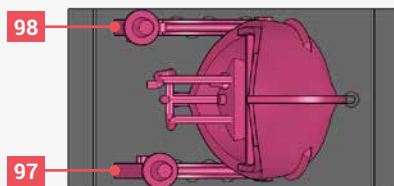

98

97



97 x1



98 x1




99 x1

BAR K





100 x8




101 x8

BAR L

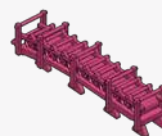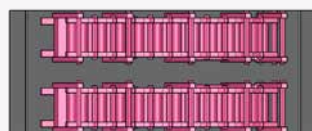

102 x2

BAR M

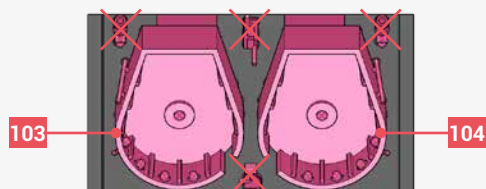

103

104




103 x1



104 x1


BAR N

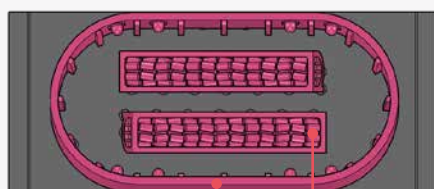


105 x1

60


BAR H

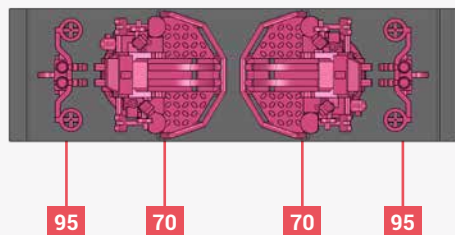

BAR O

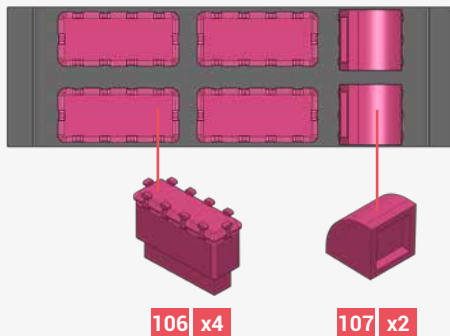

BAR P

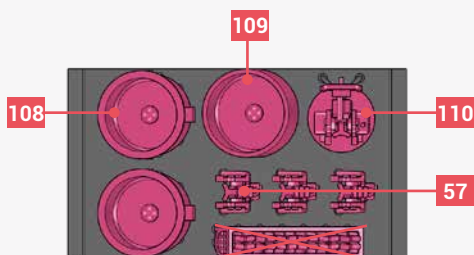

BRASS PARTS

A x1

~~B x1~~



D	x1	Ø=0.3MM L=8MM
E	x2	Ø=0.4MM L=14MM
F	x1	Ø=0.4MM L=16.5MM
G	x2	Ø=0.4MM L=18MM
H	x1	Ø=0.6MM L=13MM
I	x2	Ø=1MM L=15.5MM
J	x2	Ø=1MM L=24MM

C x2


DECALS

0 0 0 0 0 0 0
1 1 1 1 1 1 1
2 2 2 2 2 2 2
3 3 3 3 3 3 3
4 4 4 4 4 4 4
5 5 5 5 5 5 5
6 6 6 6 6 6 6
7 7 7 7 7 7 7
8 8 8 8 8 8 8
9 9 9 9 9 9 9


BRASS PARTS

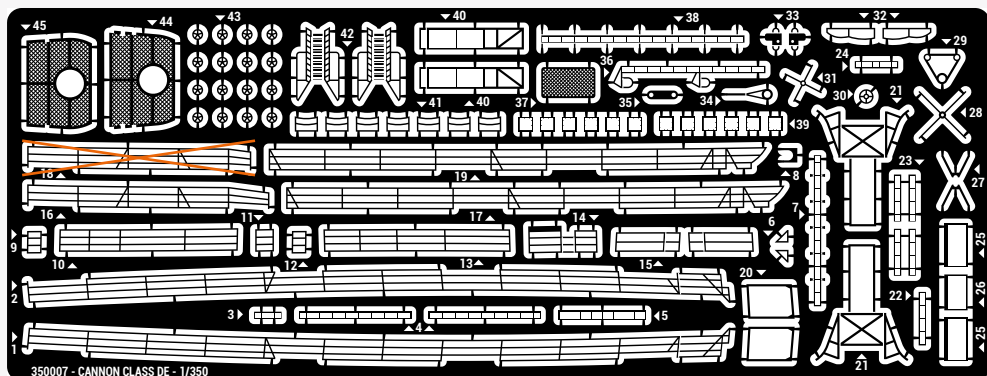

PART 16 EXTRA FRET

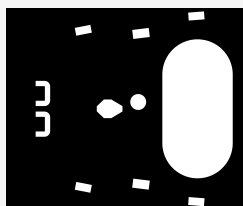

20MM GUN AFT BATHTUB TOOL

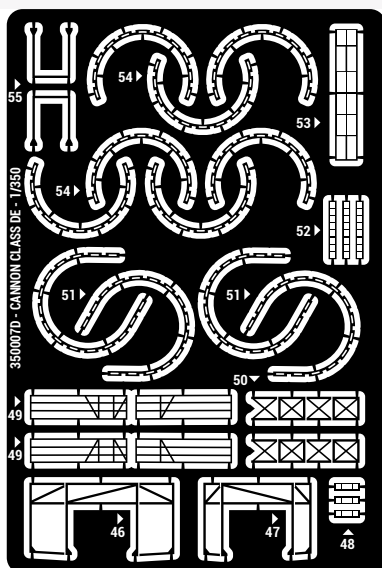



ASSEMBLY NOTES

XX	RESIN PARTS
XX	3D PARTS
XX	PHOTOETCH PARTS
XX	BRASS PARTS
XX	DECALS PARTS



!	ASSEMBLY WARNING
PS	PORT & STARBOARD
P	PORT SIDE
S	STARBOARD SIDE
X	INFORMATIONS



SOME PHOTOETCH AND 3D PARTS ARE PROVIDED IN EXTRA NUMBERS.

IMPORTANT ! PLEASE FULLY READ THE INSTRUCTIONS BEFORE STARTING THE BUILD !

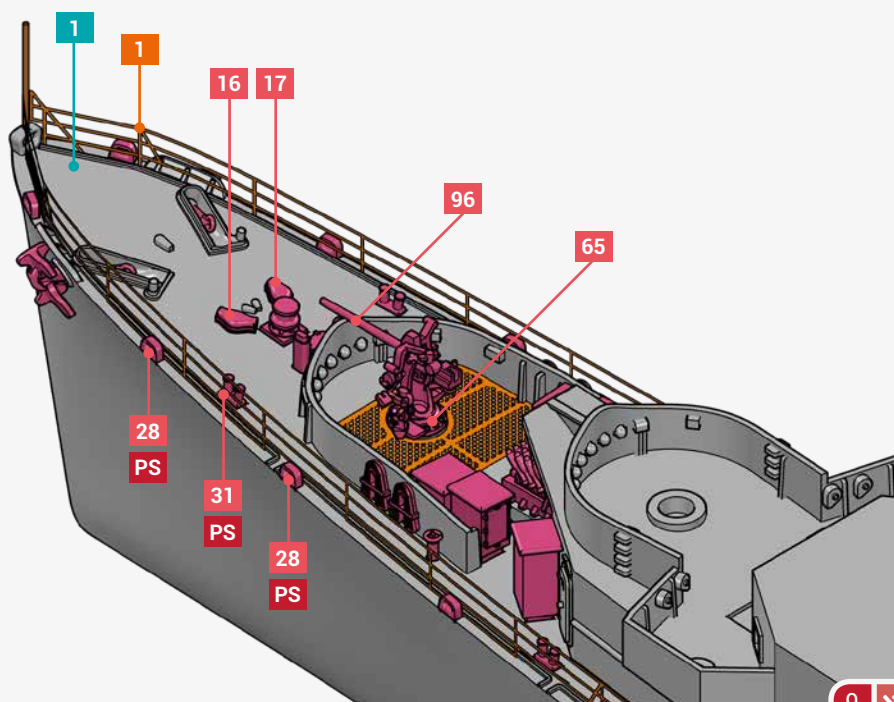
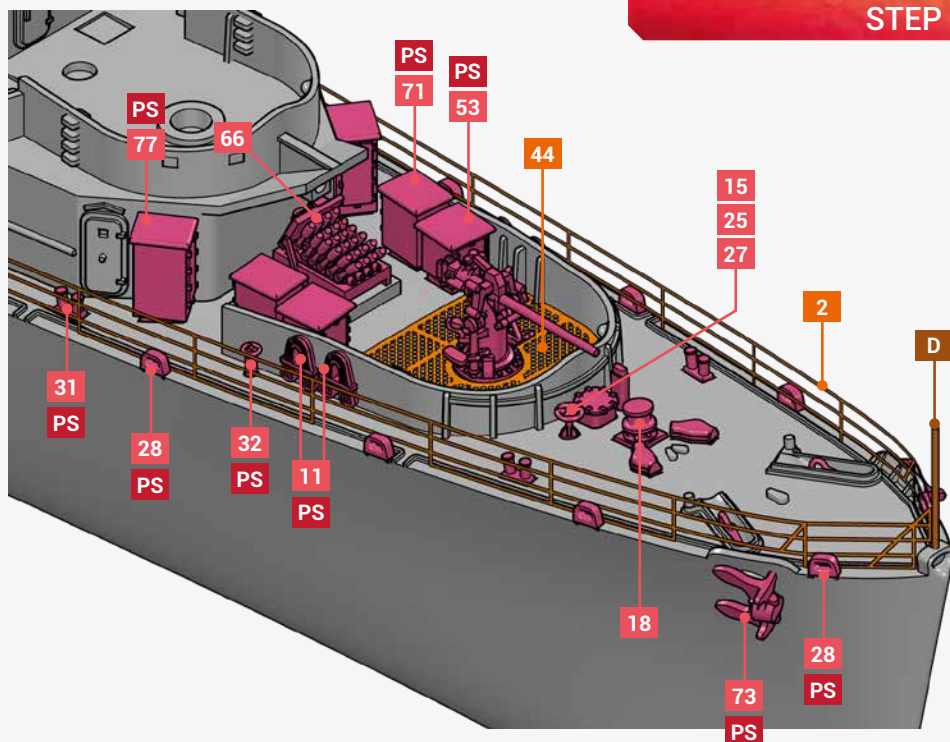




STEP 2

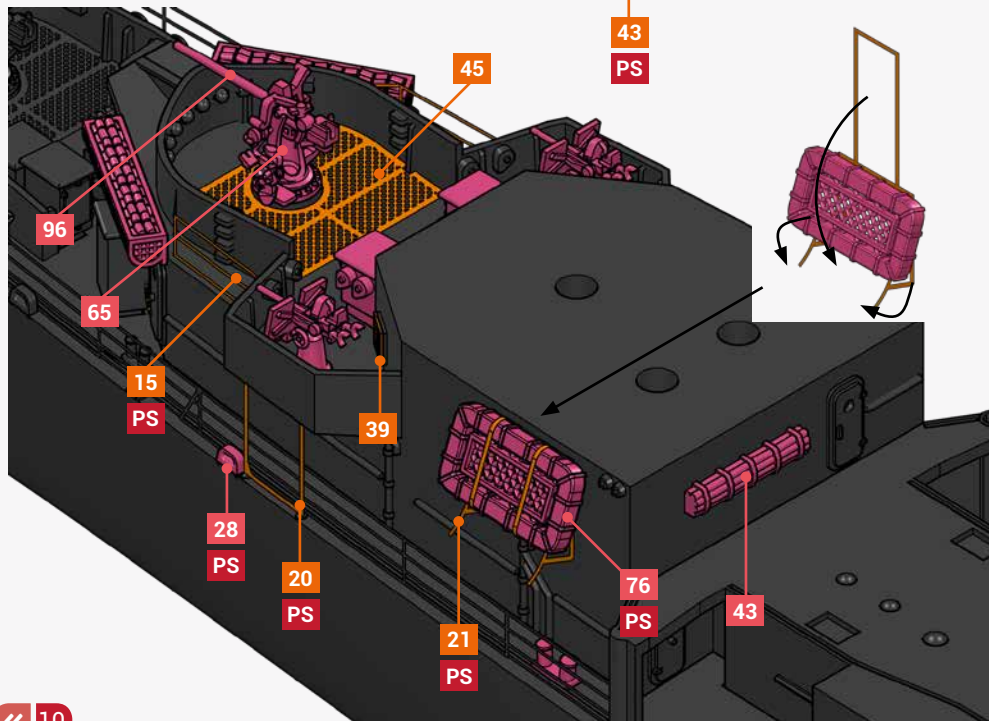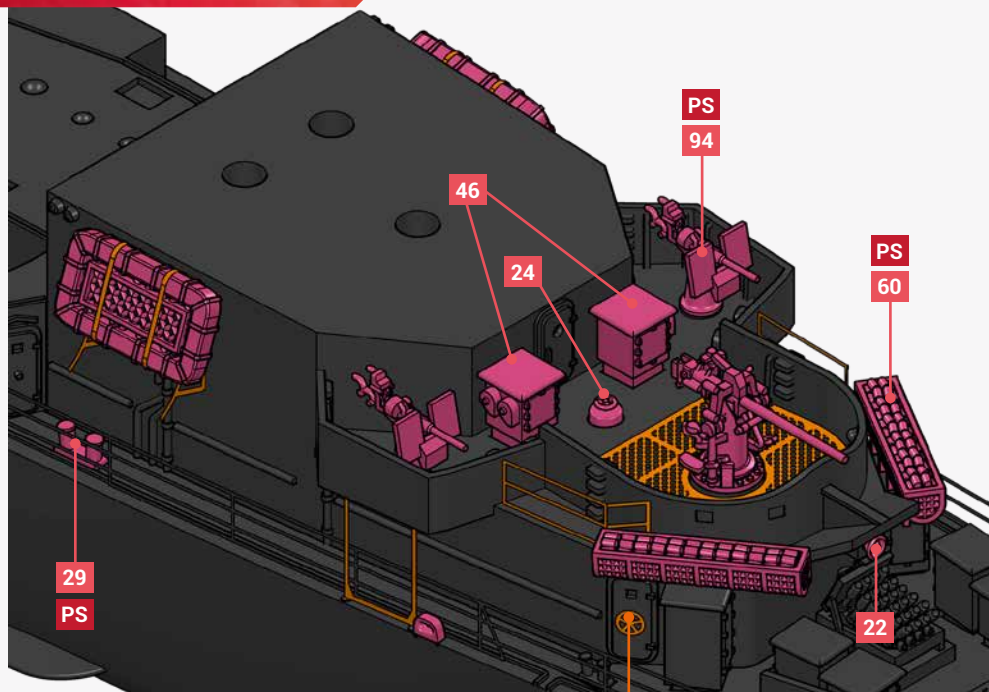


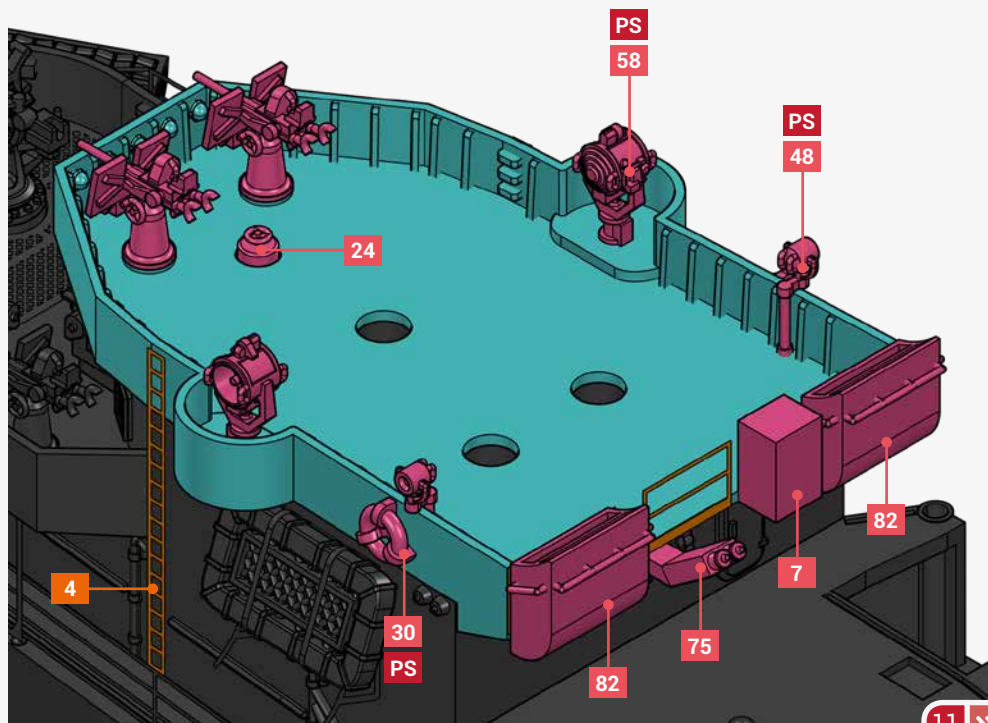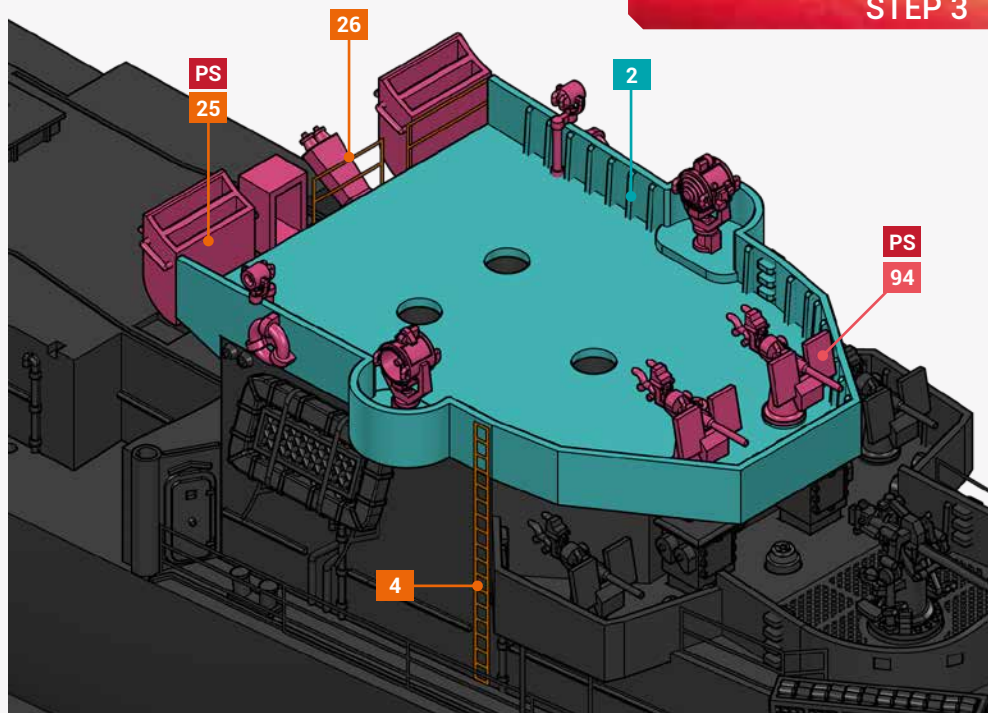


STEP 4

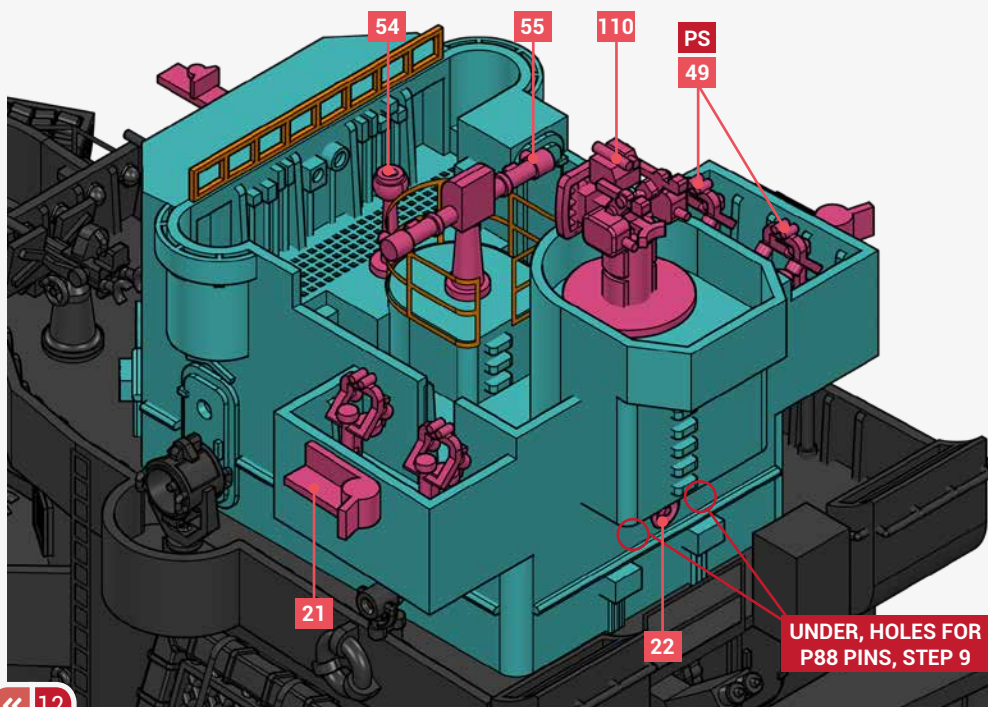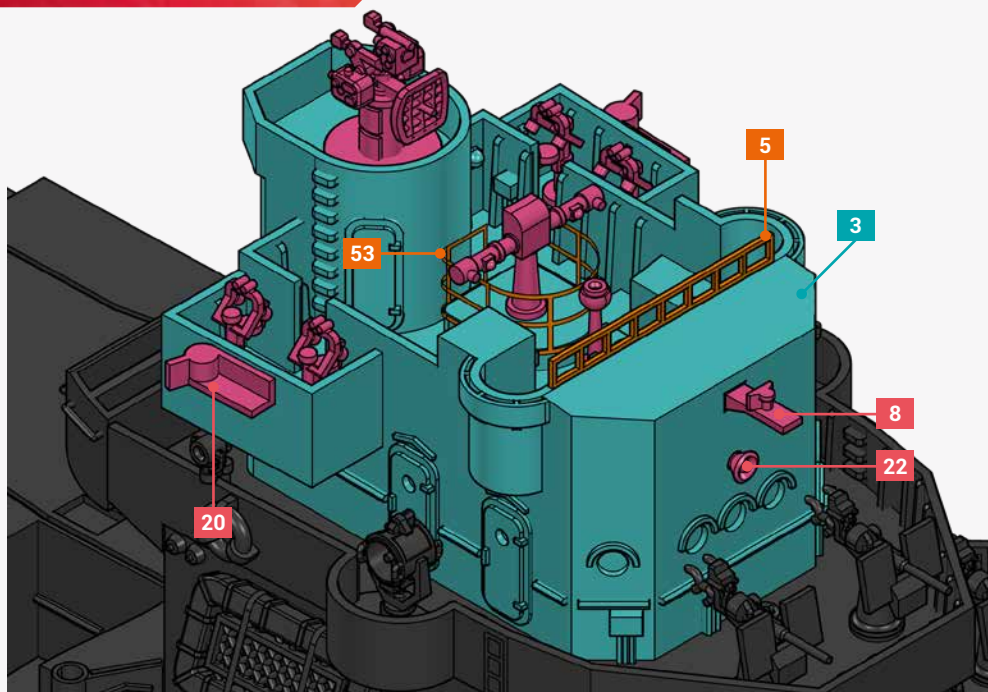

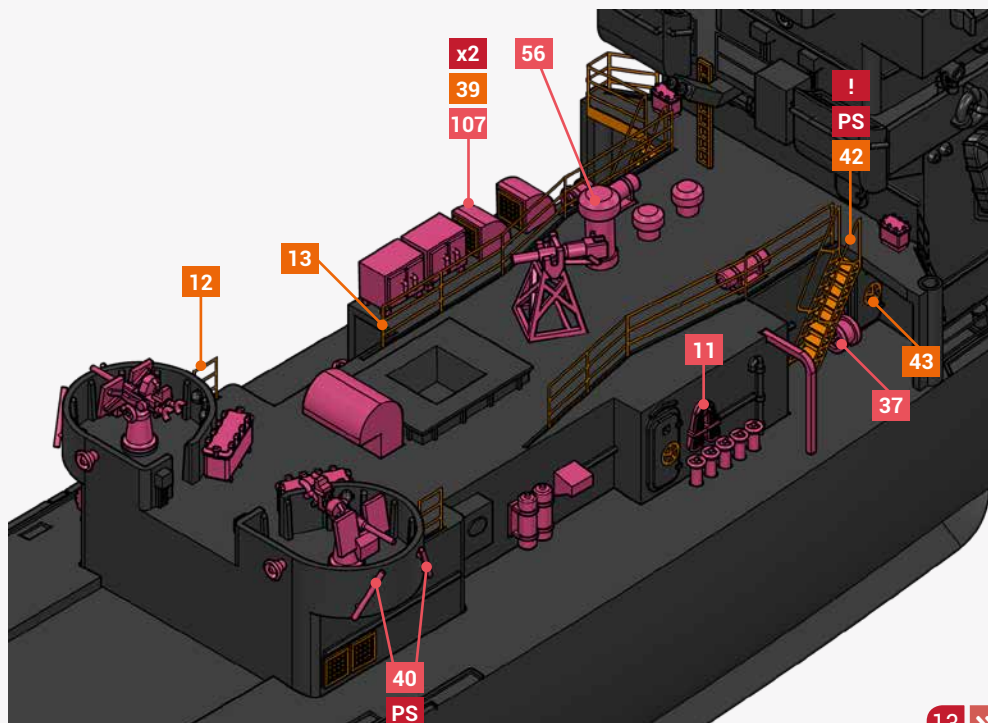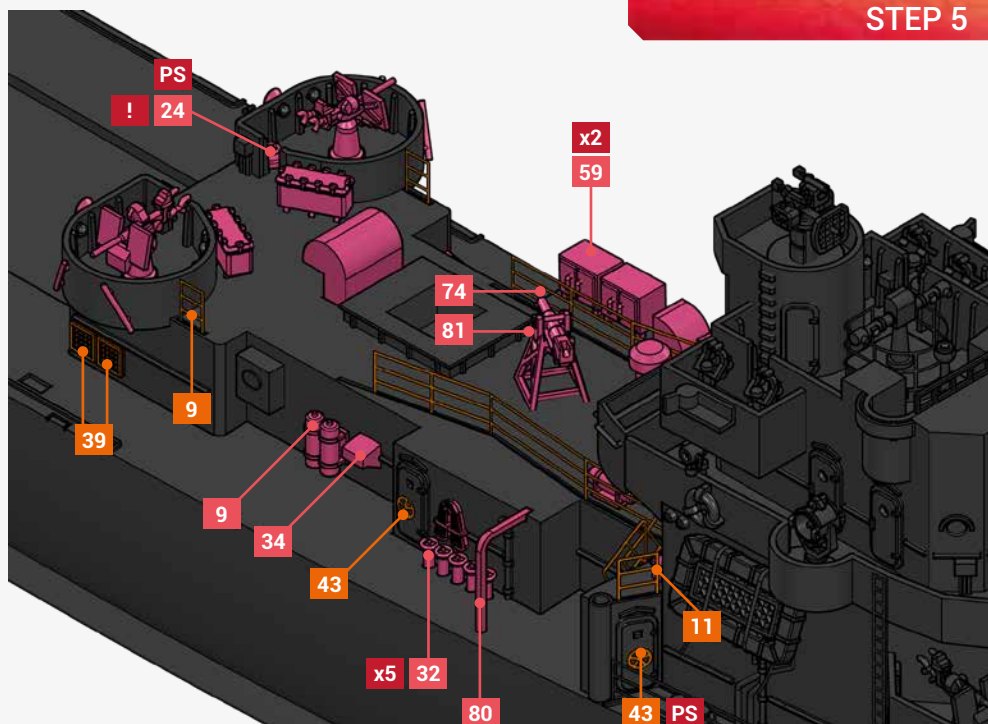


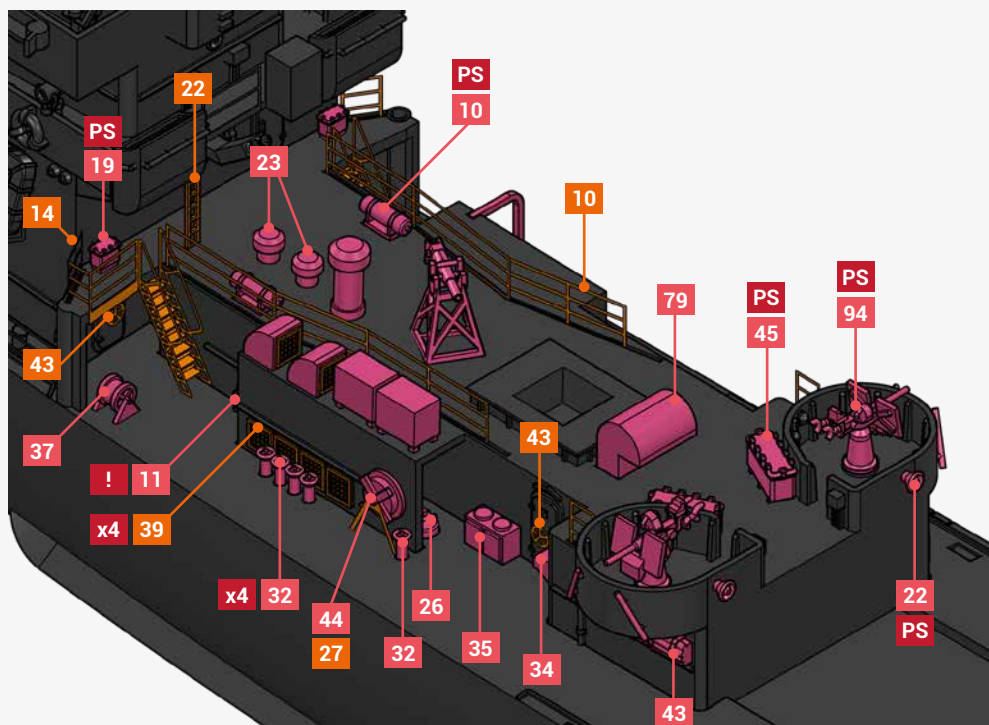


STEP 6

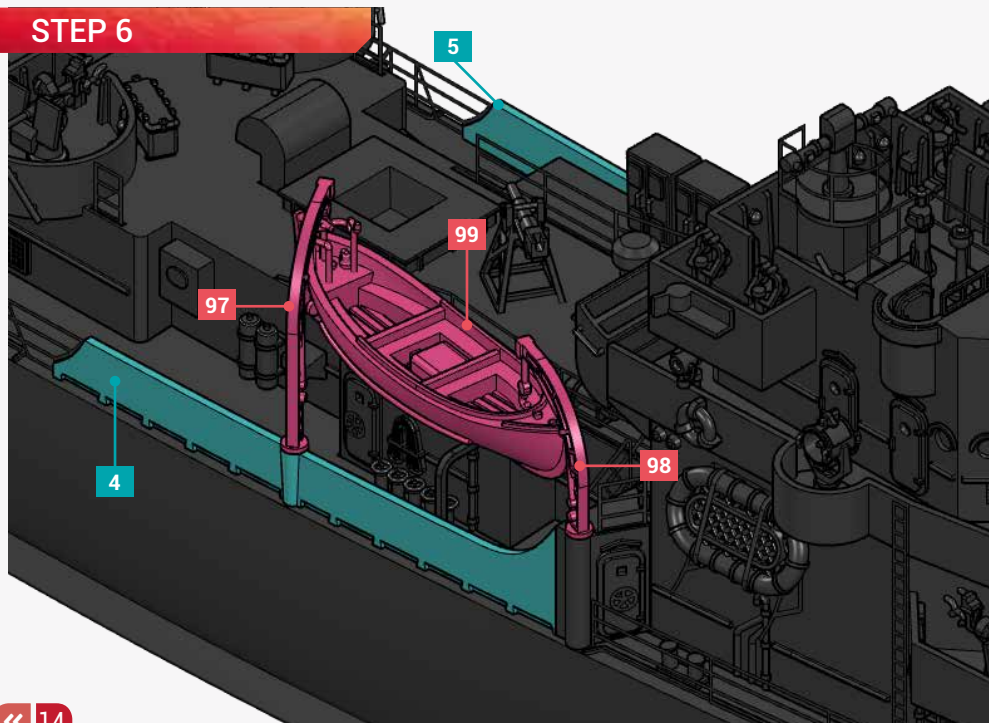



STEP 7

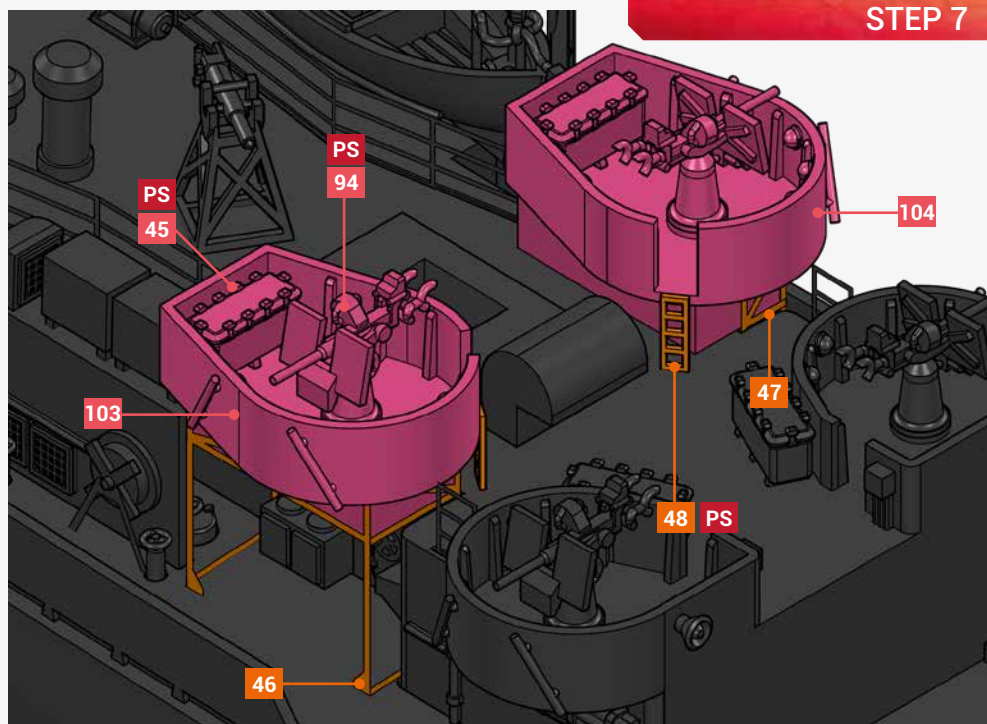



STEP 8

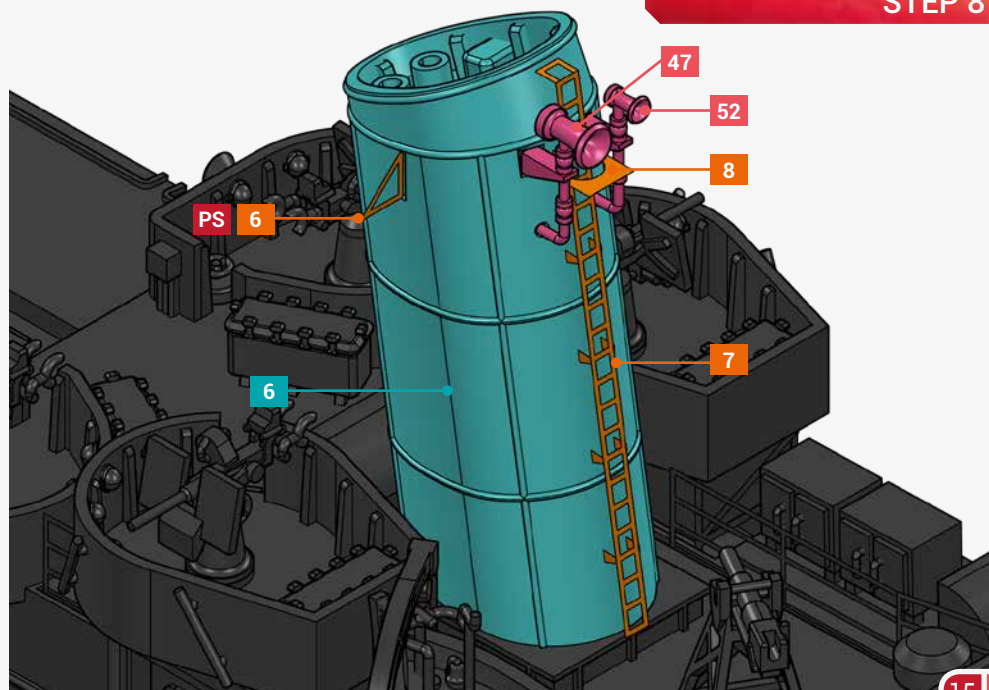


STEP 9

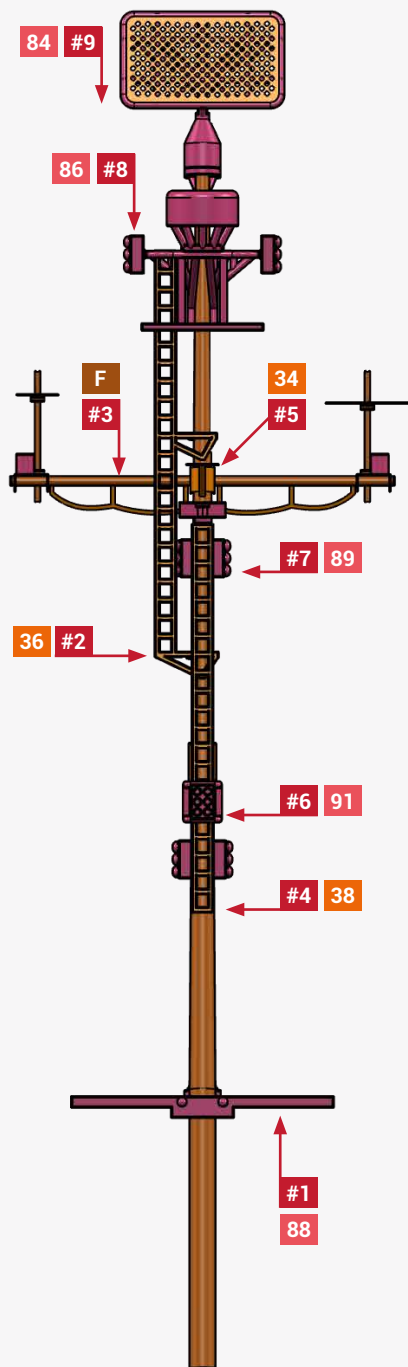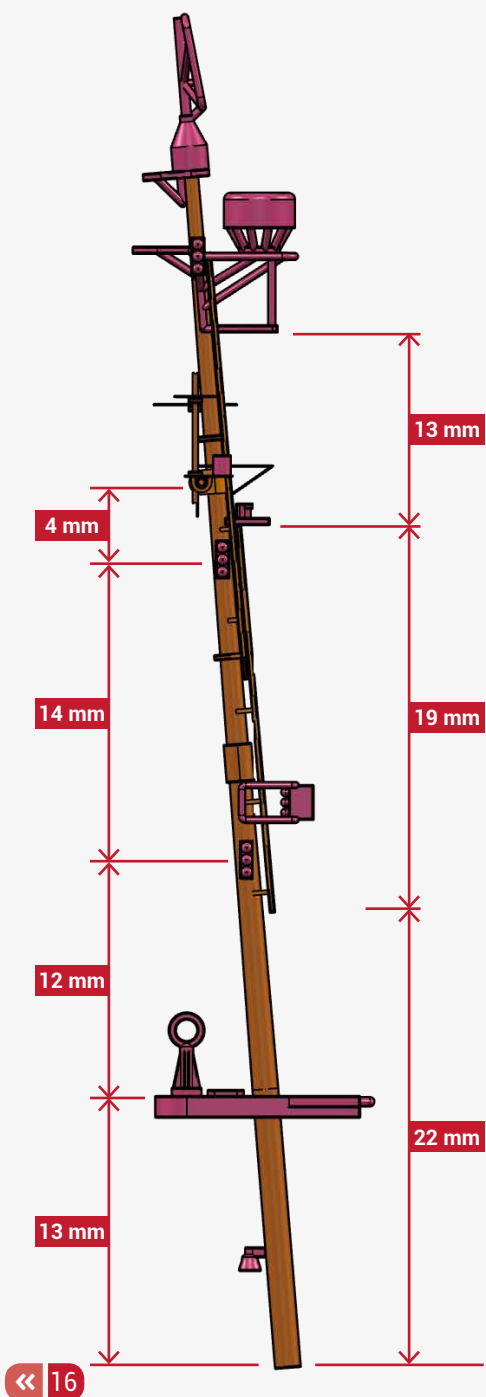


STEP 10

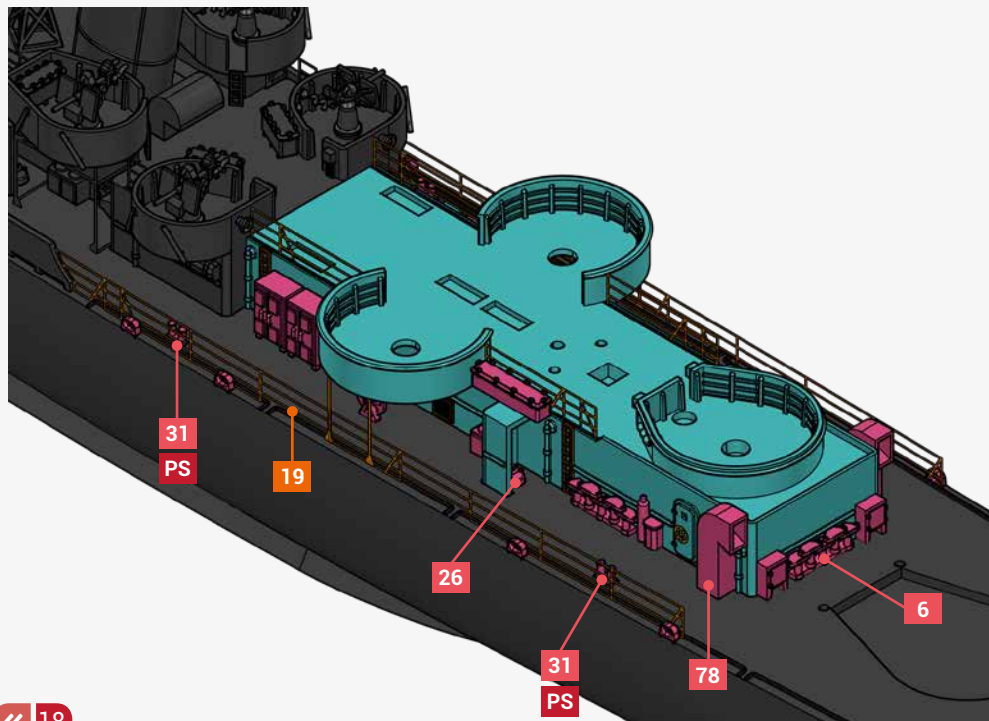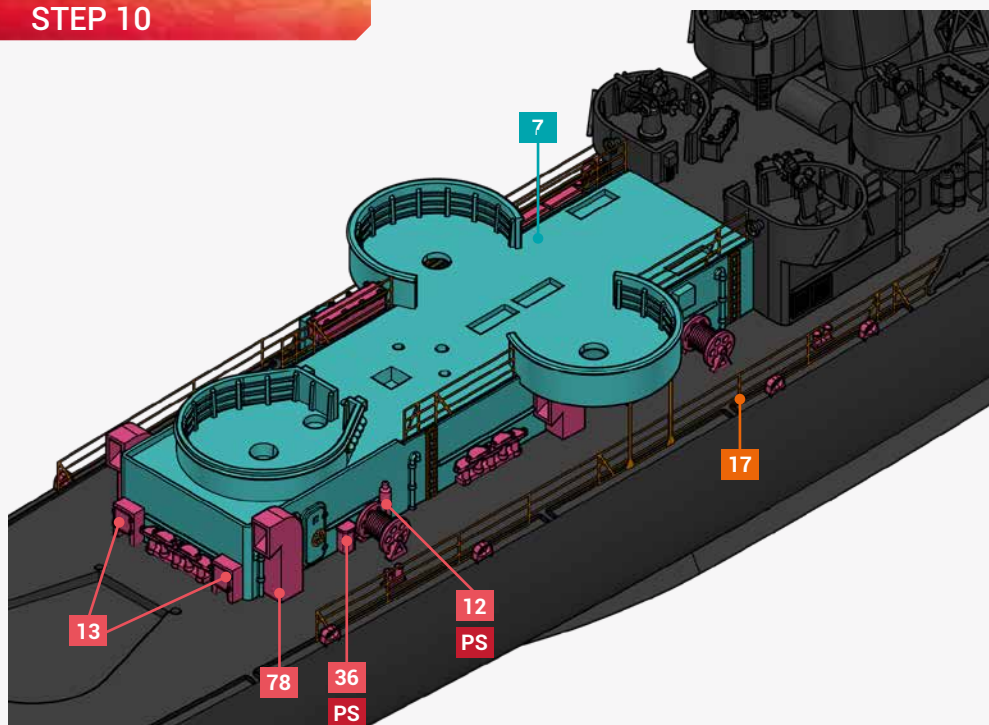


STARBOARD VIEW

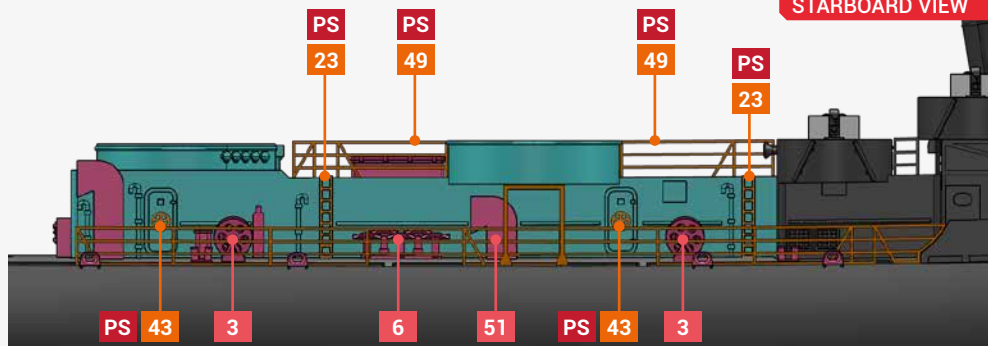



PORT VIEW


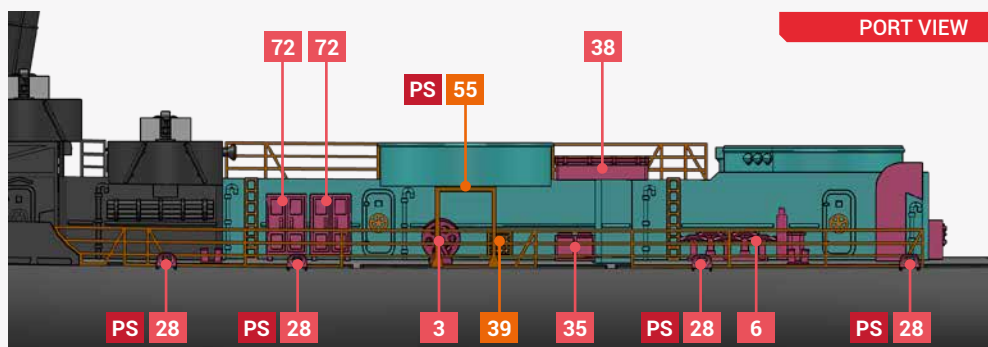


STEP 11

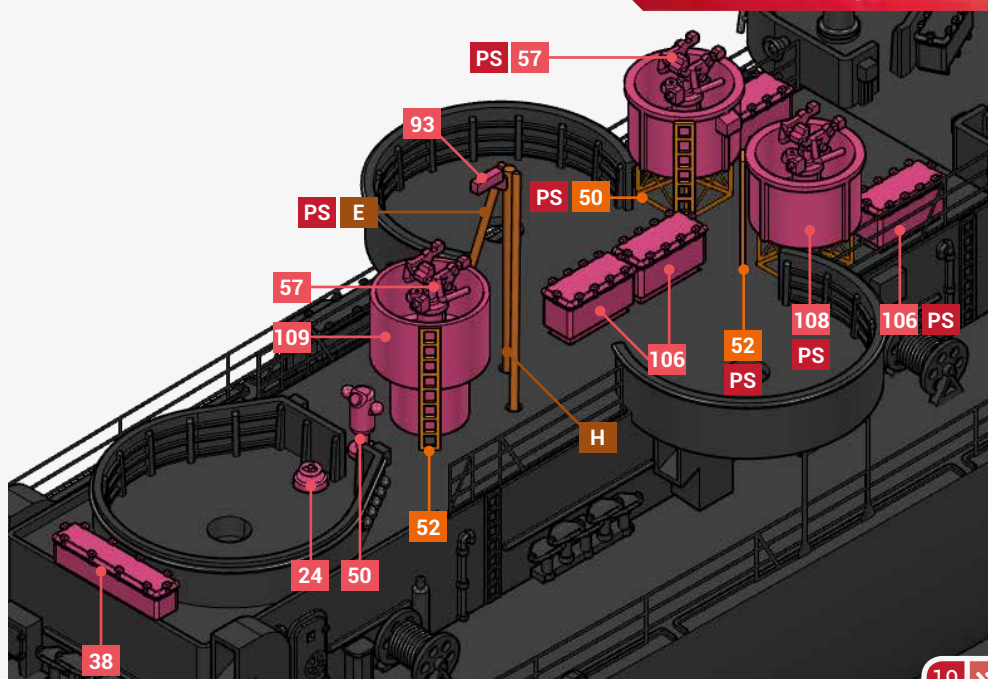



STEP 12

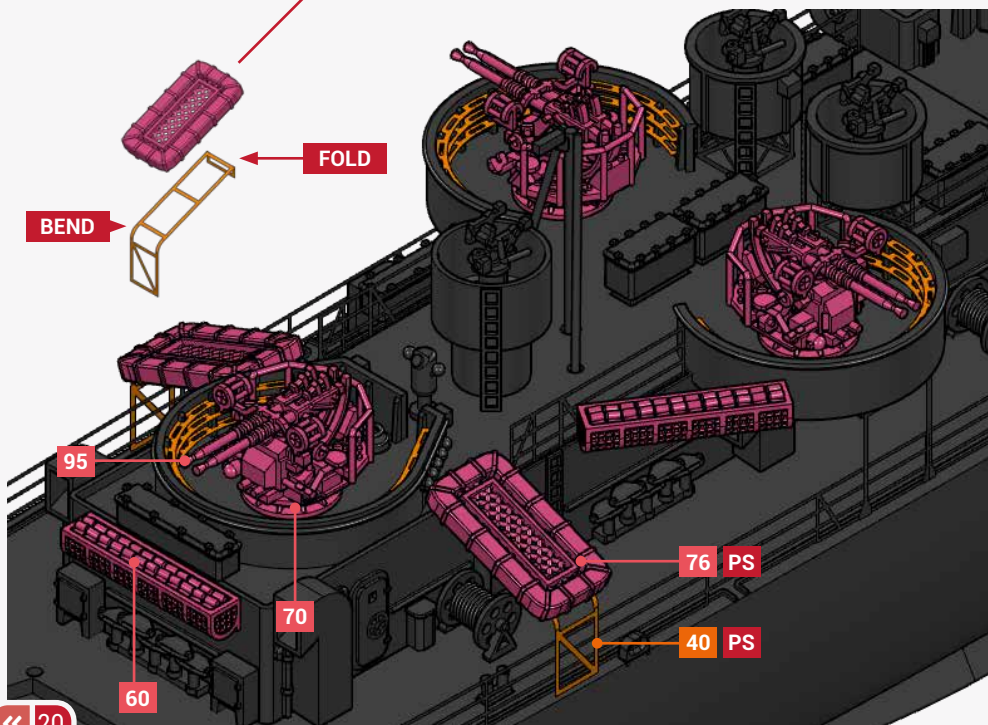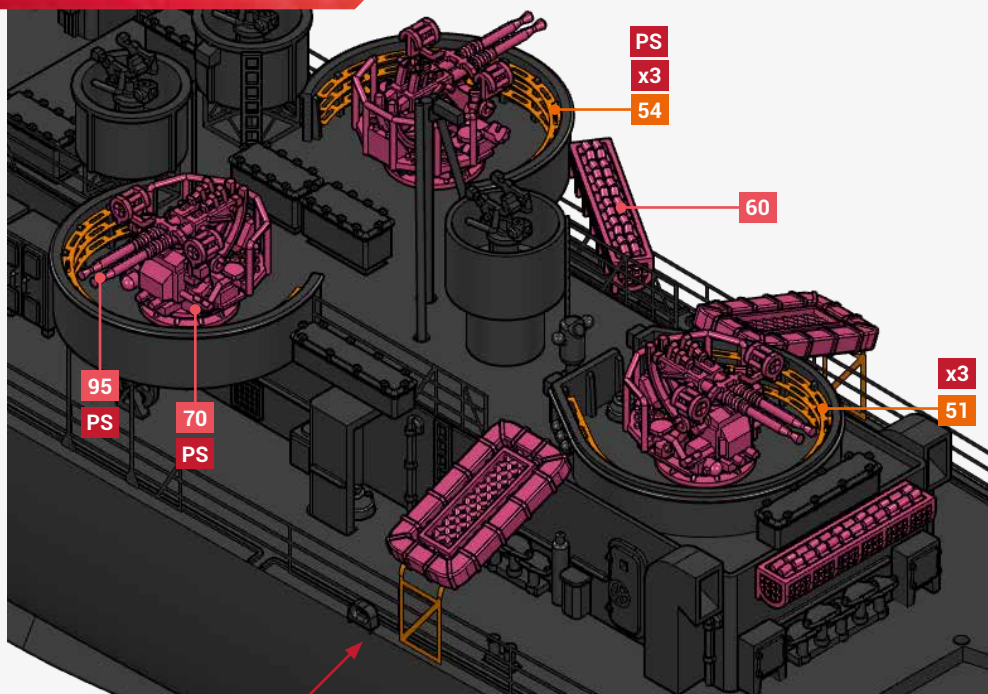

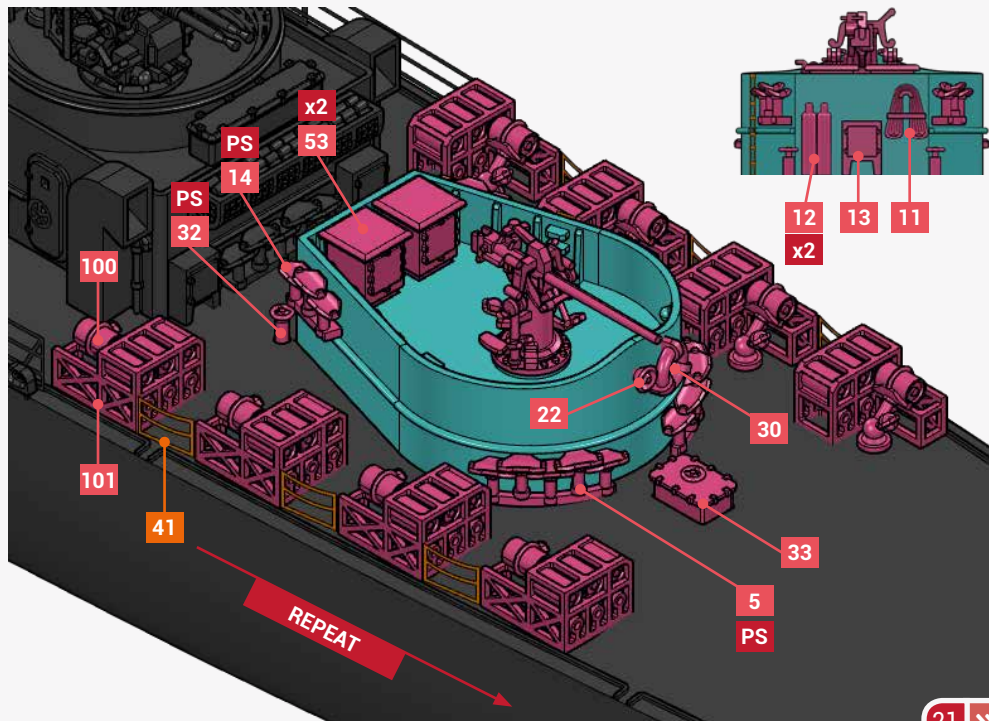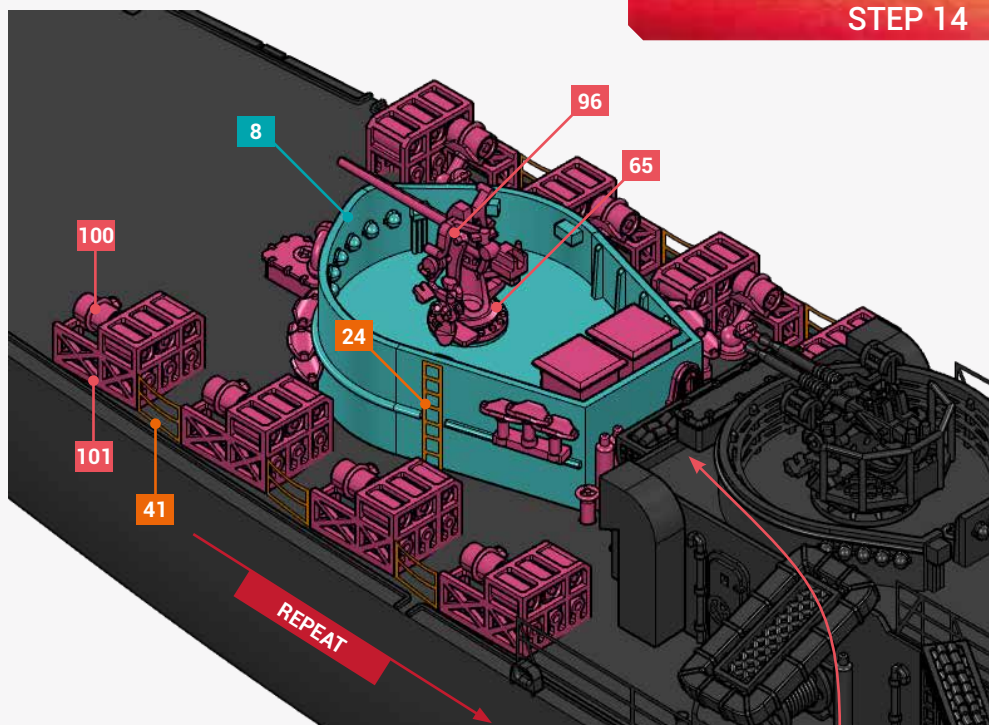



STEP 15

USE THE TOOL TO PLACE THE BATHTUB 3D PART. IT HAS TO BE DONE WITHOUT OTHER ELEMENT ON THE DECK.

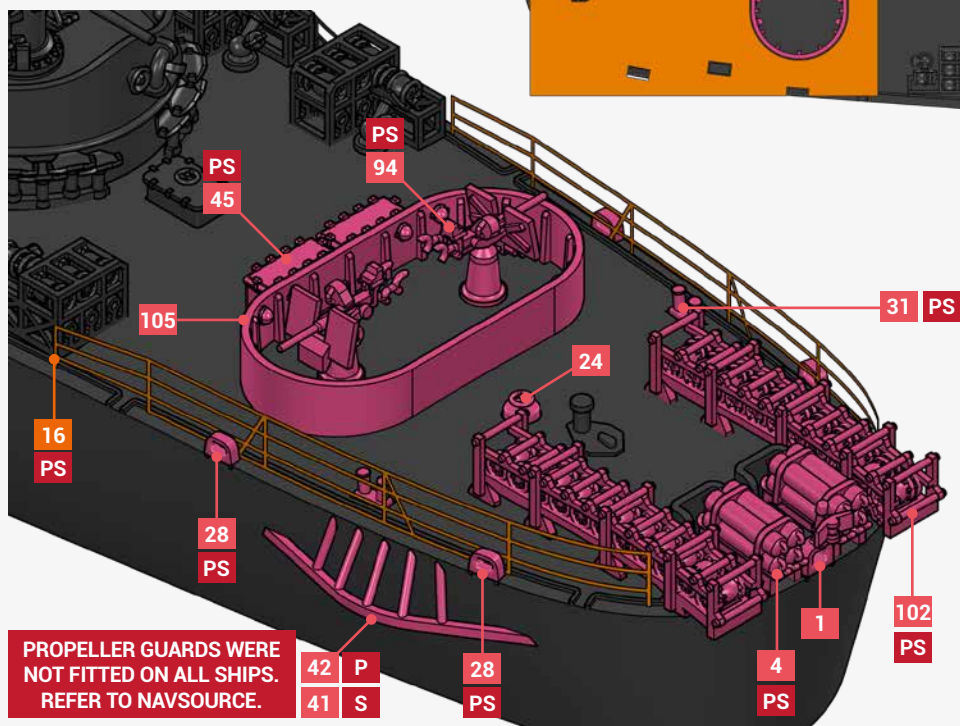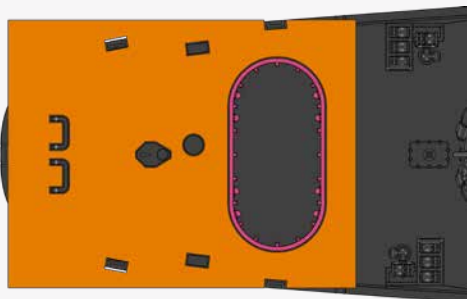

STEP 16

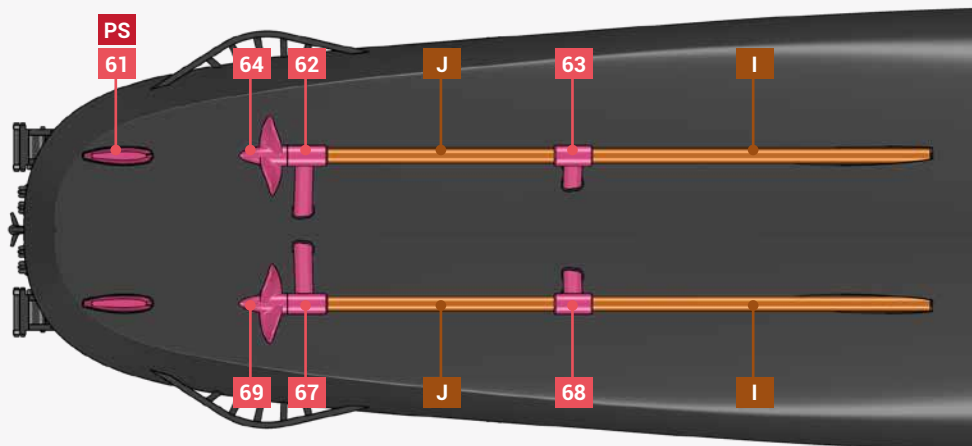

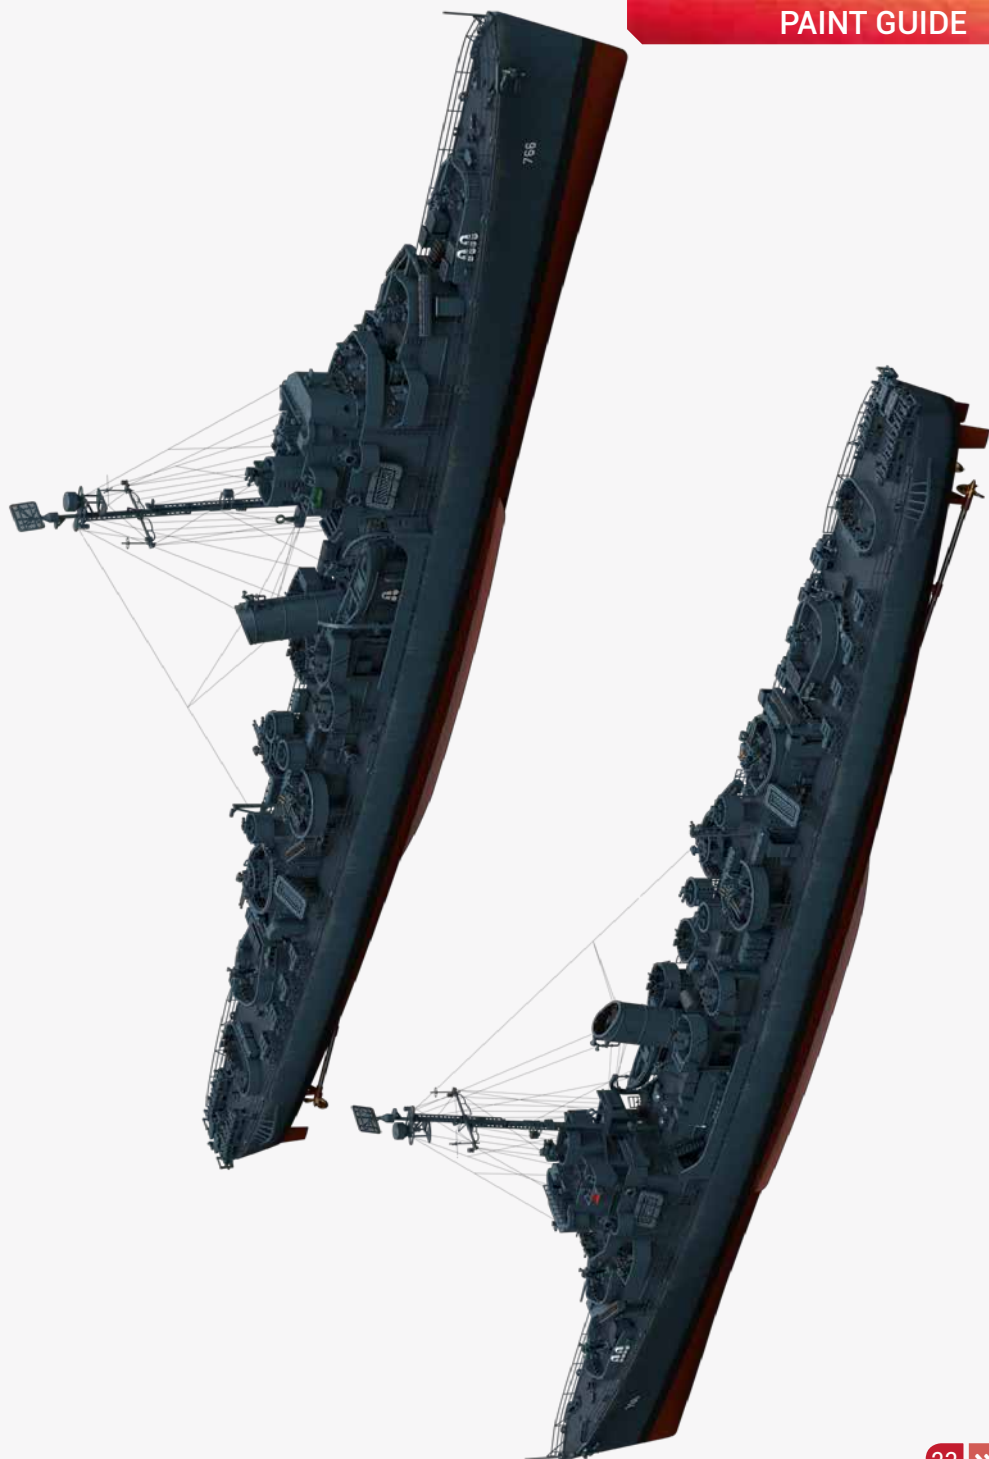

MEASURE 21 WAS USED HERE, BUT THERE ARE MANY VARIATIONS ON THE CLASS CANNON.
FOR MORE INFORMATION PLEASE VISIT :
[HTTPS://WWW.SHIPCAMOUFLAGE.COM/CANNON_CLASS.HTM](https://www.shipcamouflage.com/cannon_class.htm)

