



USS FARRAGUT (DD-348)

About the USS Farragut (DD-348) :



USS Farragut DD-348 was the first of a new class of eight destroyers launched between 1934 and 1935 which incorporated new technologies in machinery and armament. They were the first of the famous "1500-tonners" classes that were eventually succeeded by the 2100-ton Fletchers. The Farraguts saw extensive service during WWII, but only five survived the War. None were lost in combat, but USS Hull and USS Monaghan capsized during the famous Typhoon Cobra of December 1944, and USS Worden ran aground in January 1943 off the coast of Alaska.

À propos de l'USS Farragut (DD-348) :


Premier destroyer construit par les USA après la Première Guerre Mondiale, le USS Farragut DD-348 est la tête de série de huit bâtiments lancés entre 1934 et 1935, et qui seront les prototypes de navires incorporant les dernières innovations en matière de technologie navale. Tous vont servir pendant la Seconde Guerre Mondiale, mais trois d'entre-eux ne verront pas la fin du conflit, les USS Hull et USS Monaghan étant perdus lors du fameux typhon Cobra de décembre 1944, le USS Worden par échouage en janvier 1943 au large de l'Alaska.

PARTS


RESIN PARTS

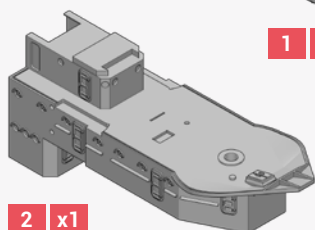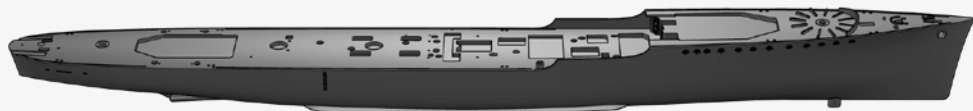


1 x1

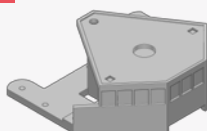

3 x1

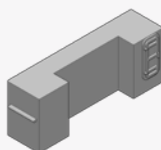

4 x1

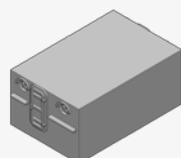

5 x1



6 x1




7 x1




8 x1




9 x1

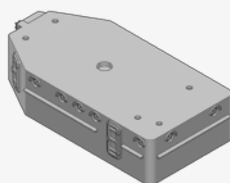


10 x1

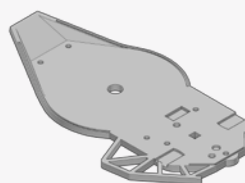


11 x1

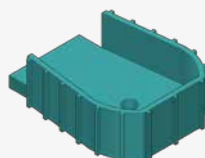


12 x1

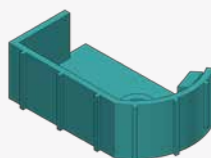

13 x1

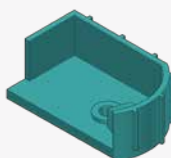


14 x1

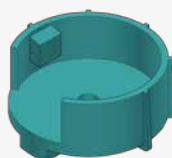

15 x1



16 x1

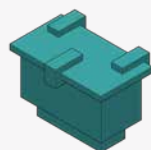


17 x6



18 x5



19 x2

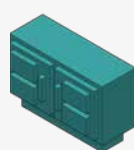


20 x2




21 x3




22 x6

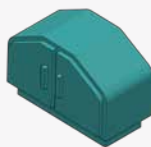


23 x3

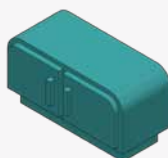

24 x1

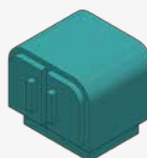

25 x3

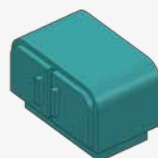


26 x2



27 x4




28 x8

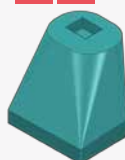

29 x1




30 x1

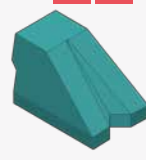

31 x1



32 x2

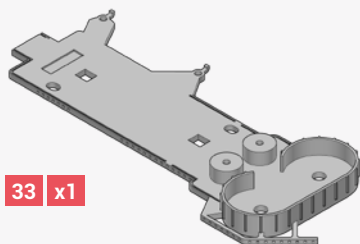

33 x1




34 x3



35 x4



36 x2

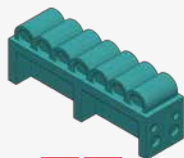

38 x2



40 x1




41 x1



42 x1

3D PRINTED PARTS

BAR A

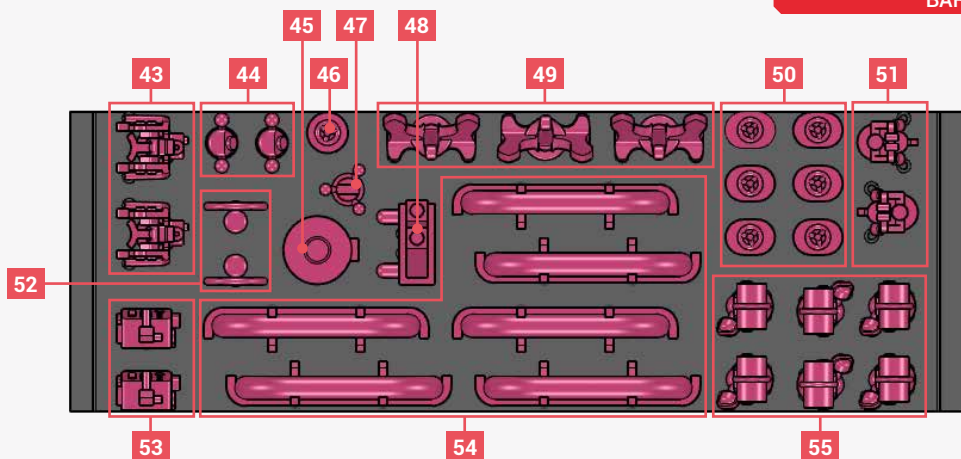

43 x2



44 x1




45 x1



46 x1



47 x1



48 x1



49 x2



50 x6




51 x2



52 x1



53 x2

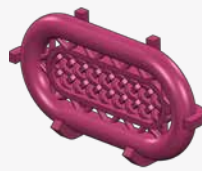


54 x6






55 x4

BAR B

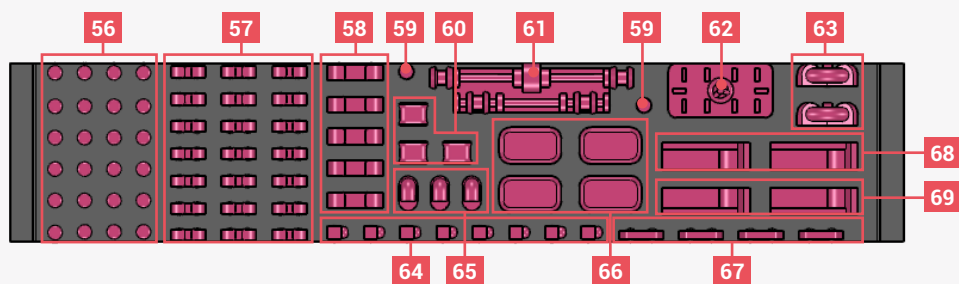

BAR C

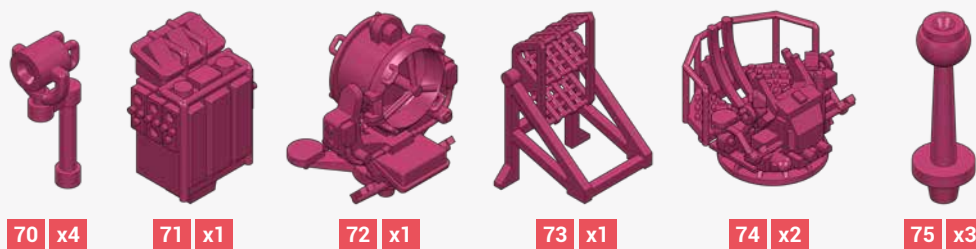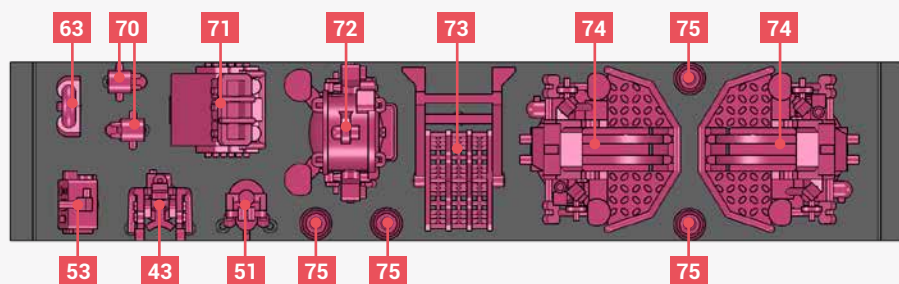

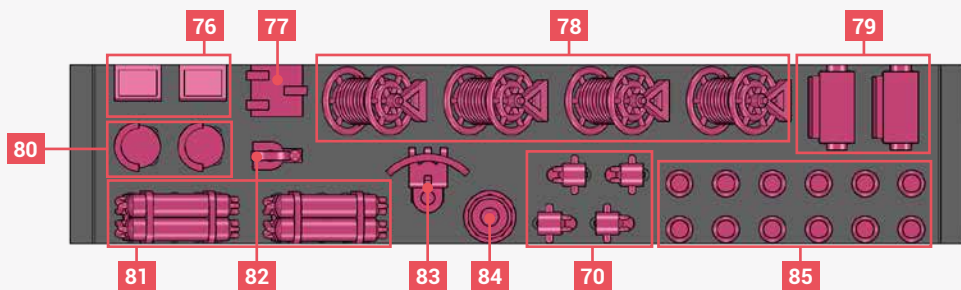


76 x2



77 x1



78 x3

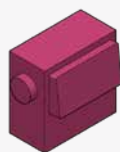


79 x2



80 x2



81 x1

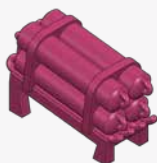

82 x1




83 x1



84 x1



85 x9

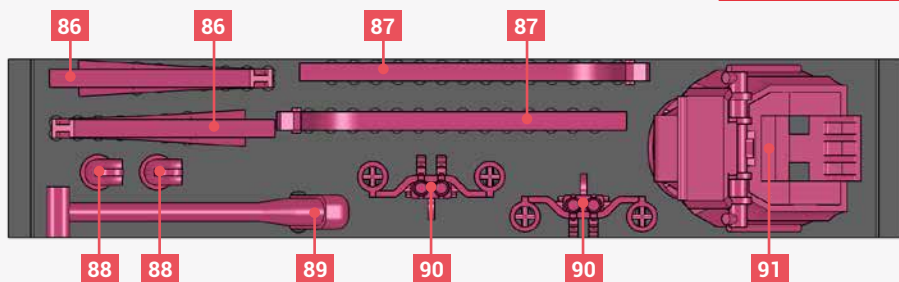

86 x2




87 x2




88 x1



89 x1



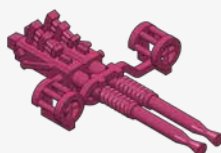


90 x2

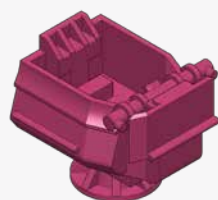


91 x1

OTHER BARS

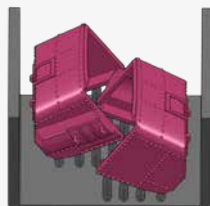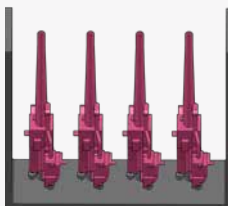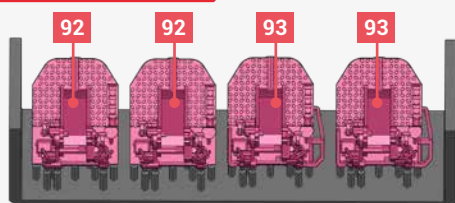


x2

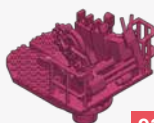


x2




x4

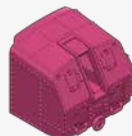


x2

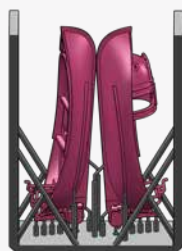


x1

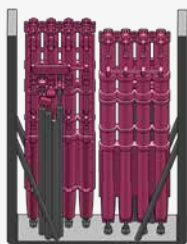

x2

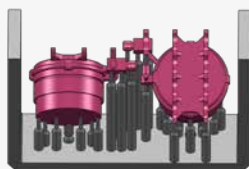


x2

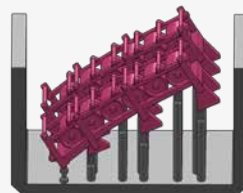

x2



x5

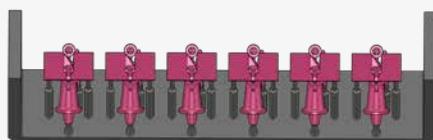


x1

103


x2

102

x1

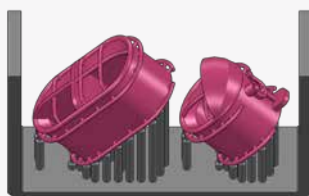


x1

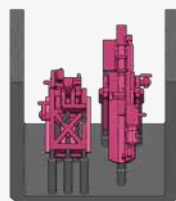

x1



x1

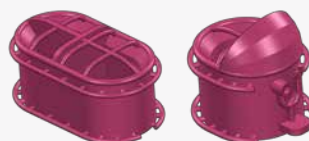


x1



x1

PHOTO ETCH PARTS

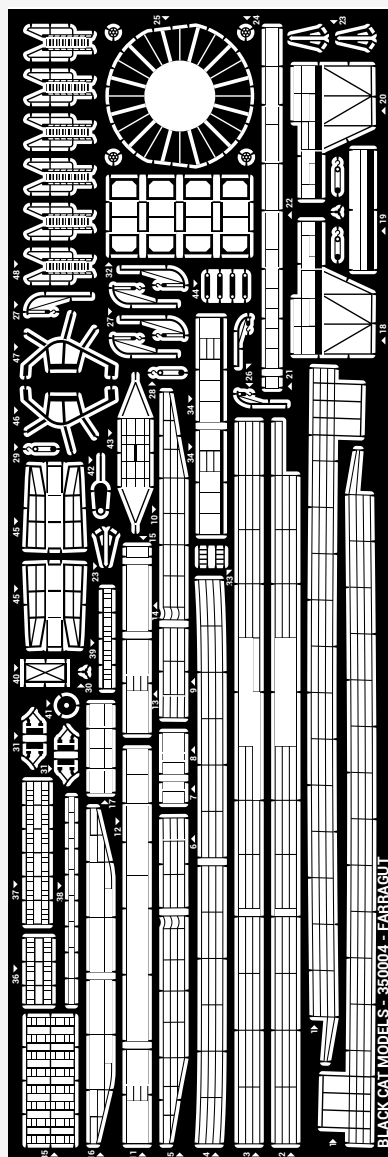


BLACK CAT MODELS 350004 FARRAGUT

348	348	348	348	348
349	349	349	349	349
350	350	350	350	350
351	351	351	351	351
352	352	352	352	352
353	353	353	353	353
354	354	354	354	354
355	355	355	355	355

348	: USS Farragut
349	: USS Dewey
350	: USS Hull
351	: USS Macdonough
352	: USS Worden
353	: USS Dale
354	: USS Monaghan
355	: USS Aylwin

BRASS PARTS


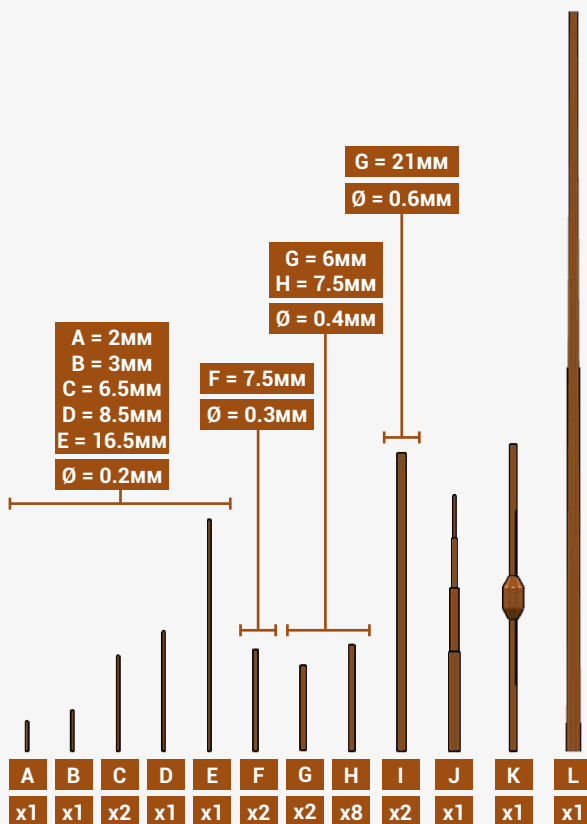


ASSEMBLY NOTES



XX	RESIN PARTS
XX	PHOTOETCH PARTS
XX	BRASS PARTS

XX	DECALS PARTS
!	ASSEMBLY WARNING
PS	PORT & STARBOARD PART



STEP 1

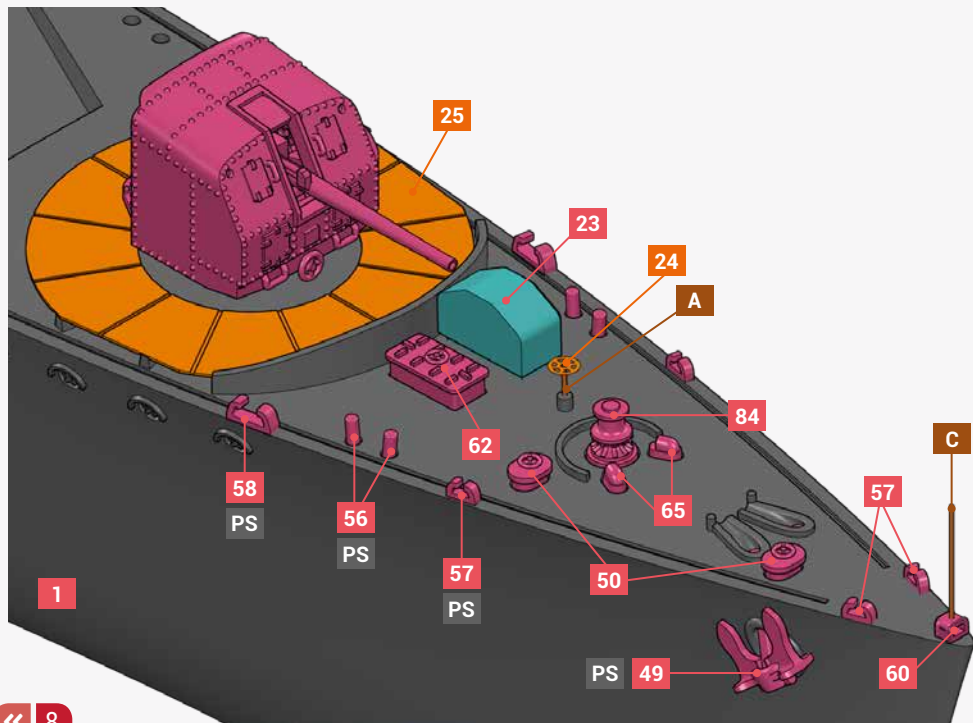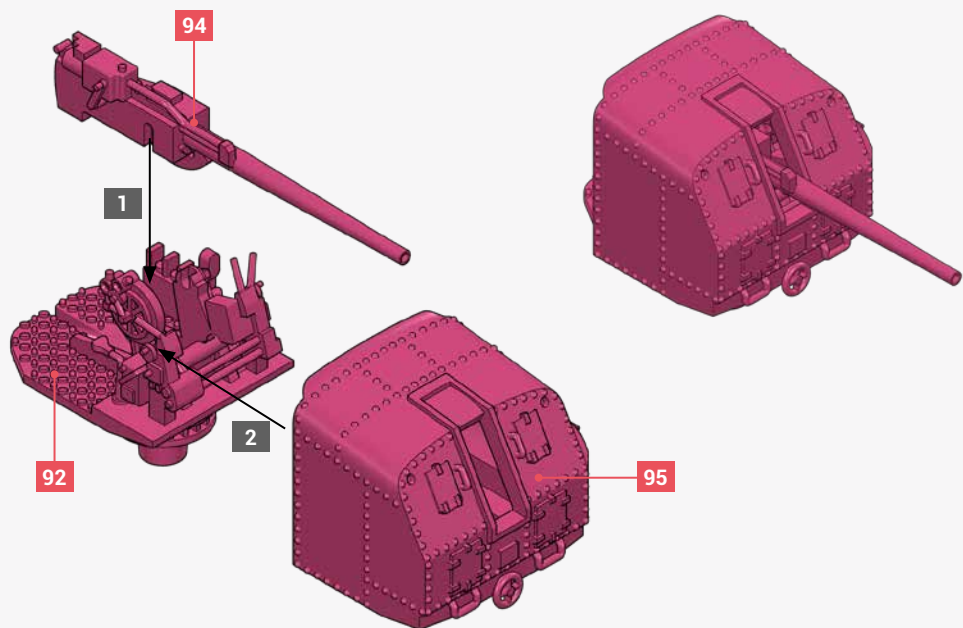


STEP 2

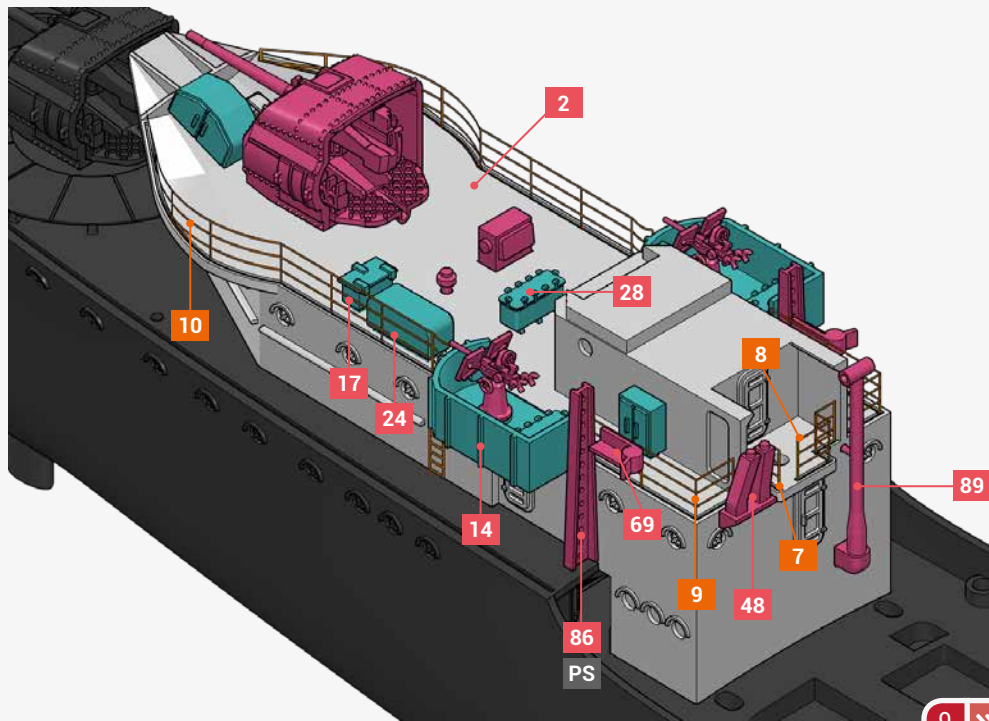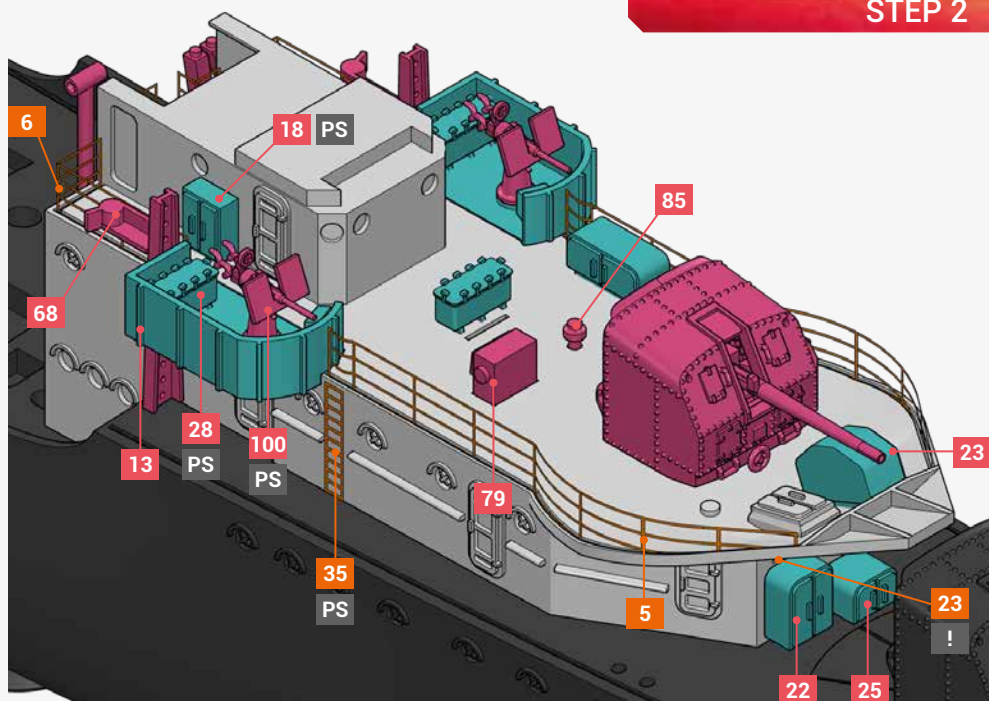



STEP 3

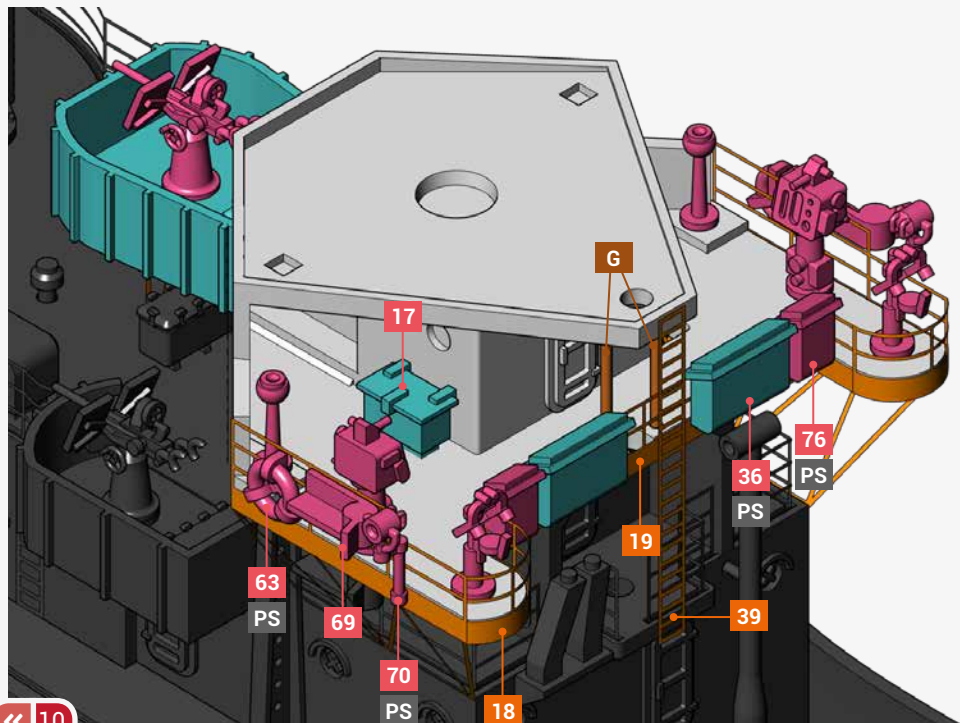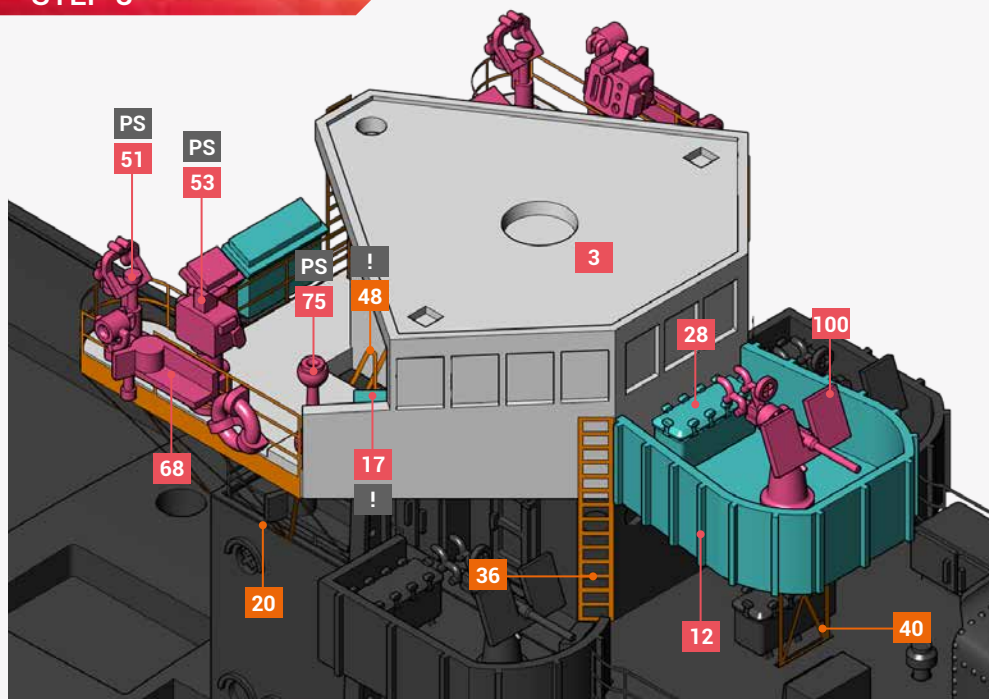


STEP 4

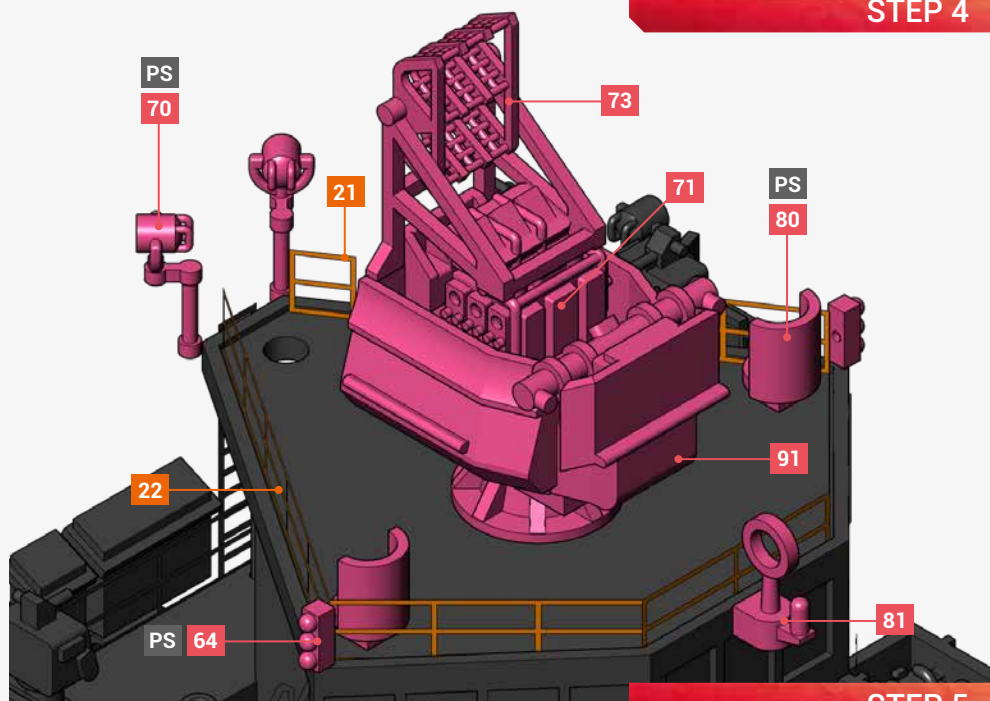


STEP 5

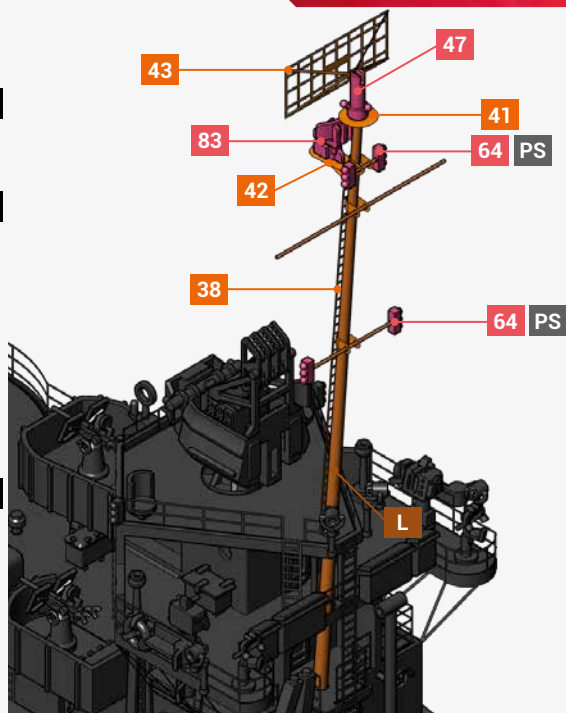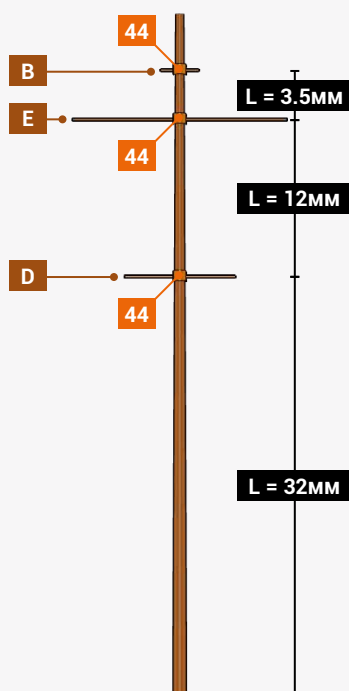



STEP 6

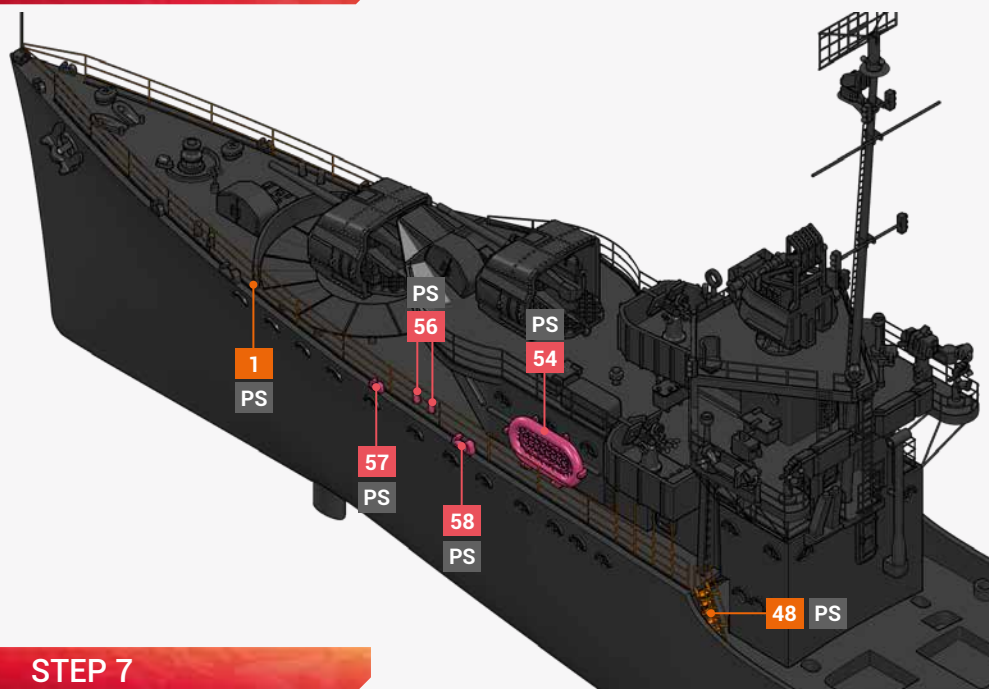


STEP 7

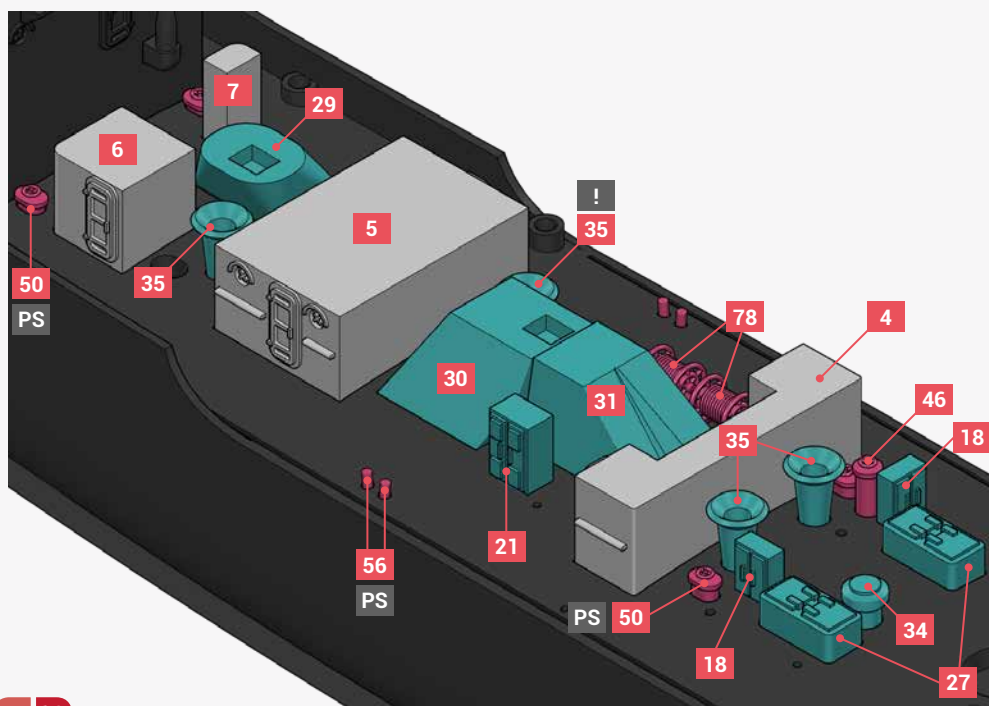



STEP 8

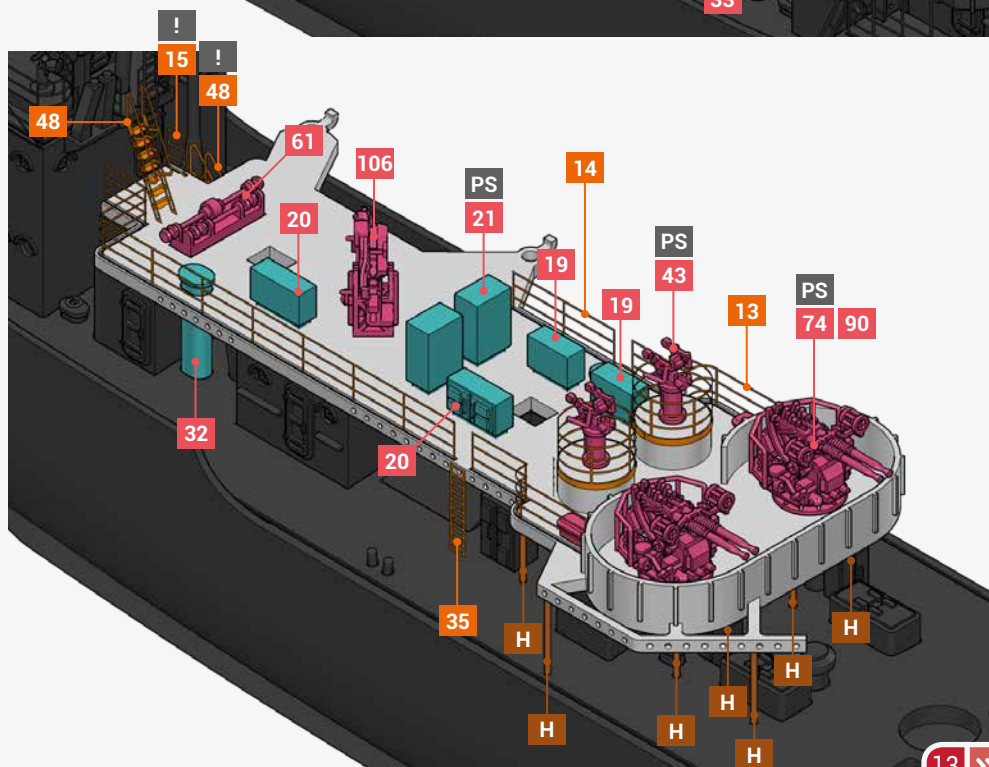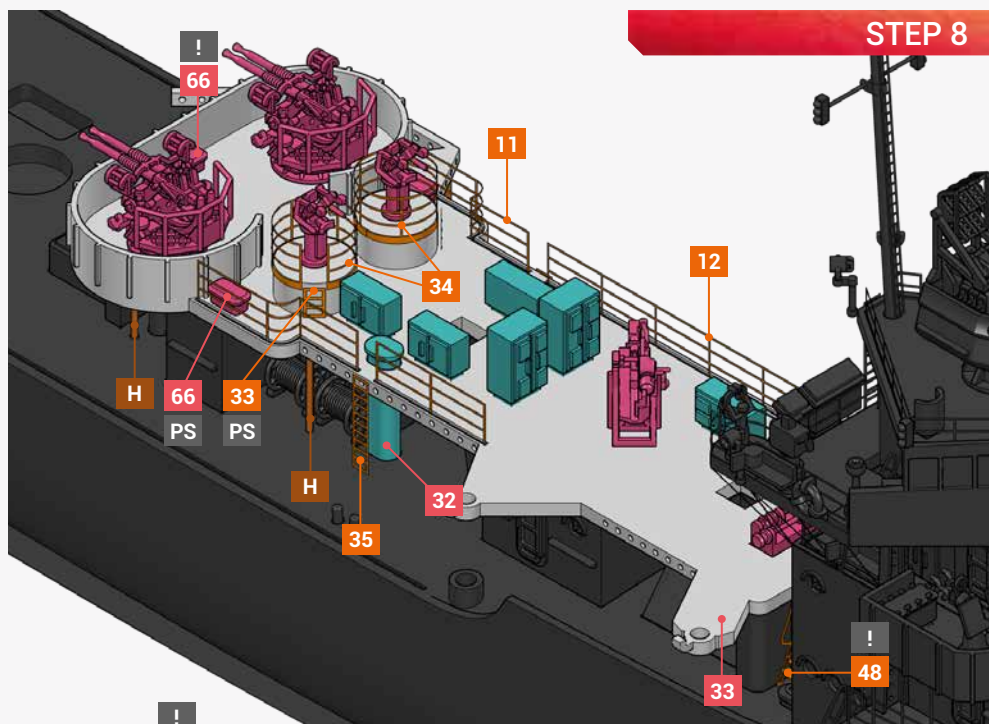


STEP 9

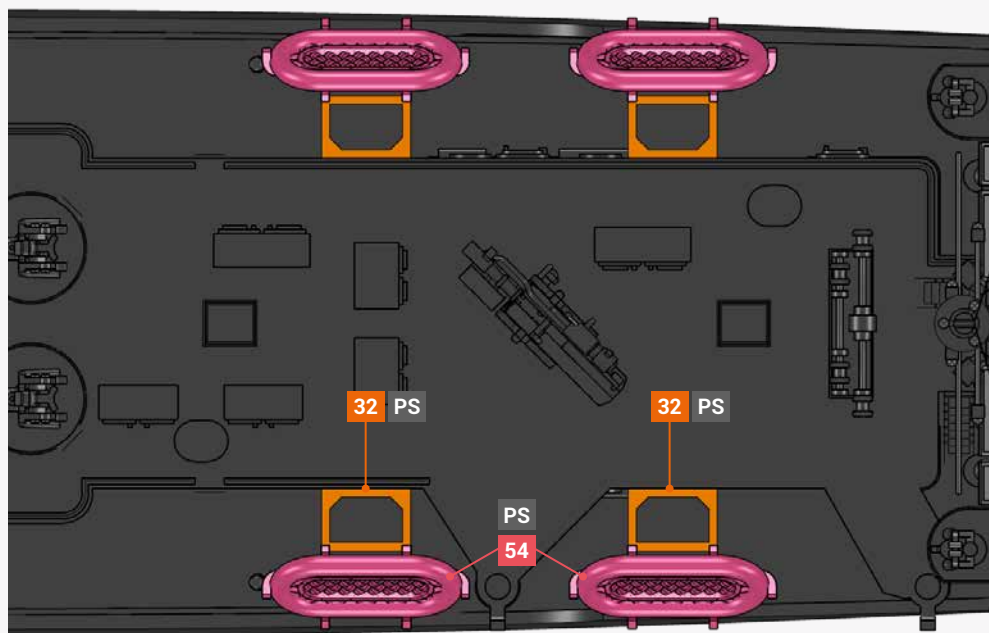


STEP 10

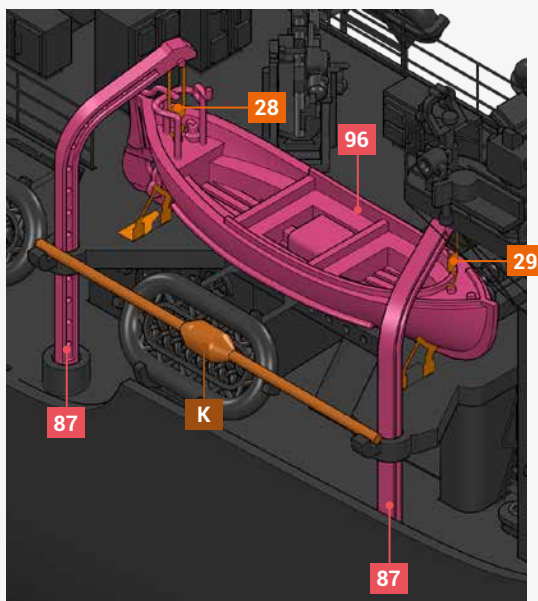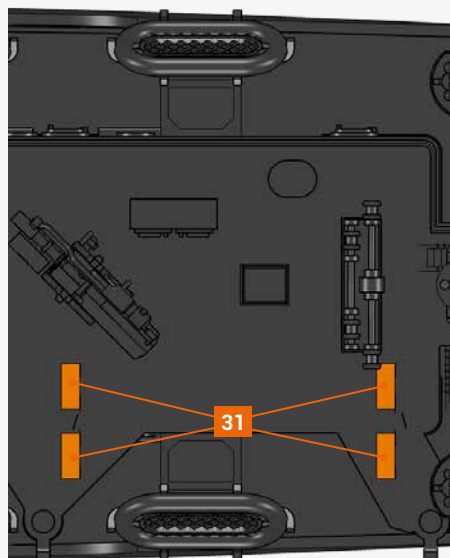



STEP 11

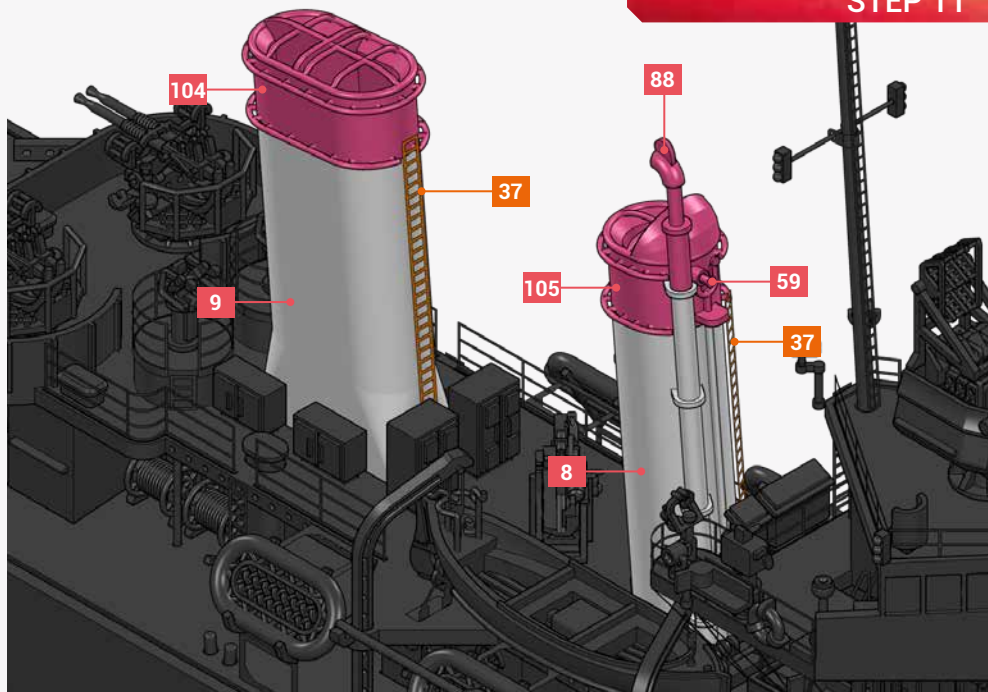


STEP 12

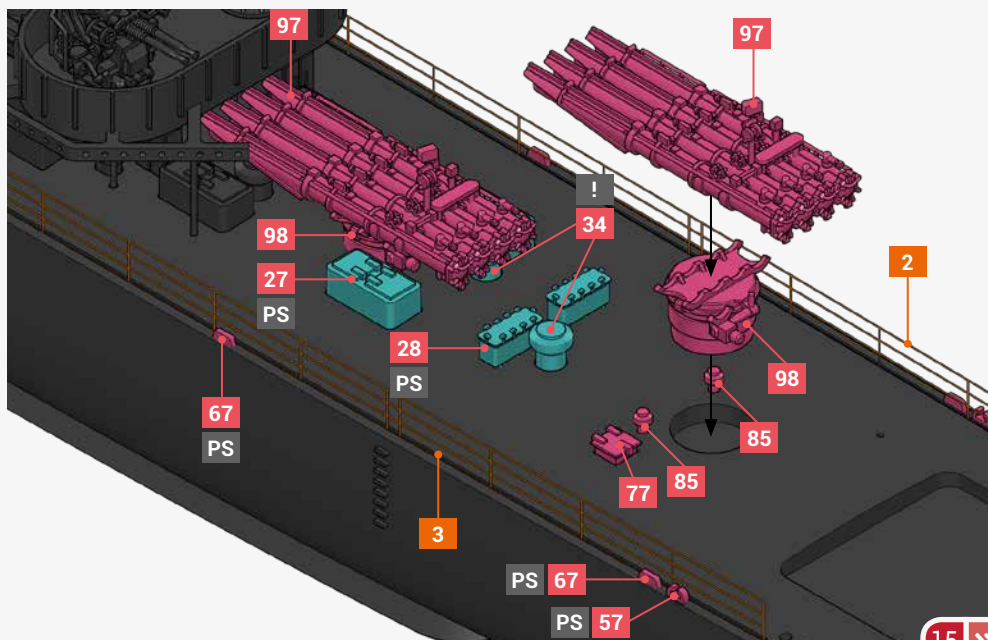


STEP 13

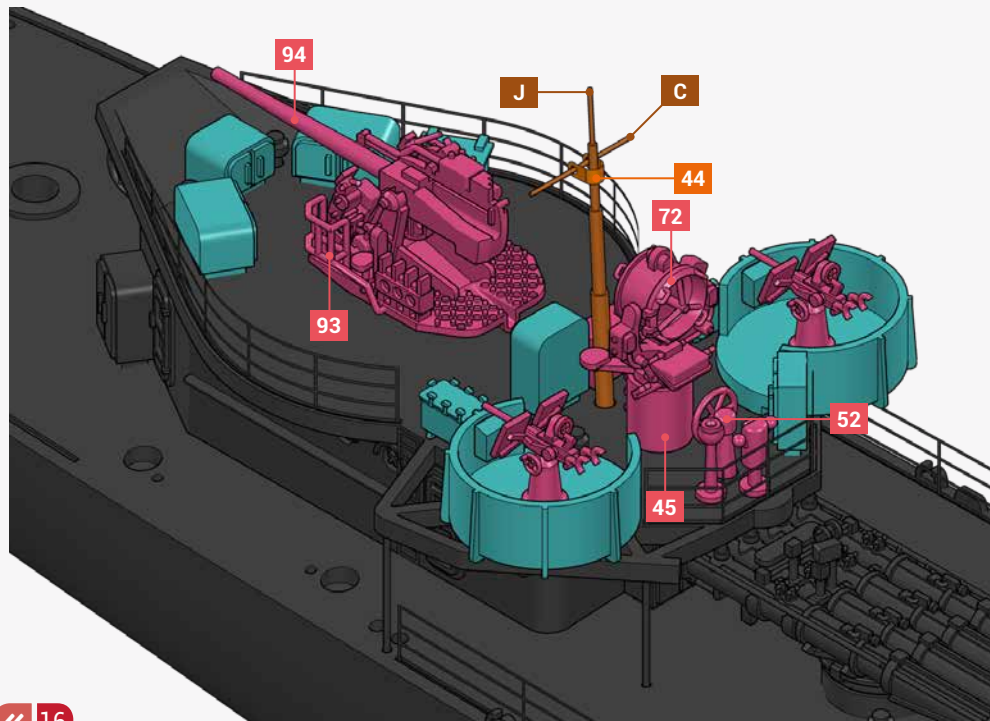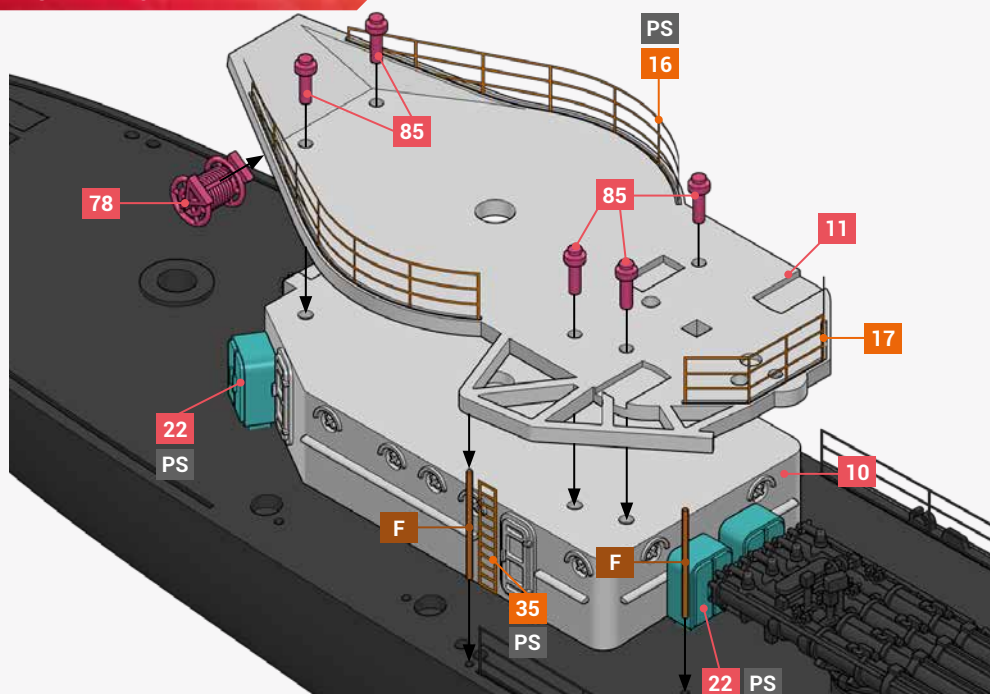


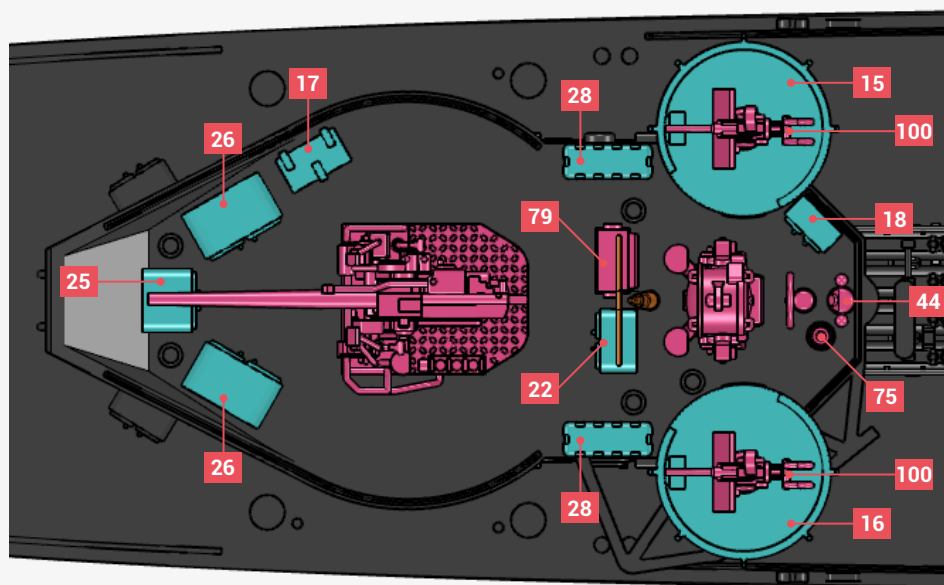


STEP 14

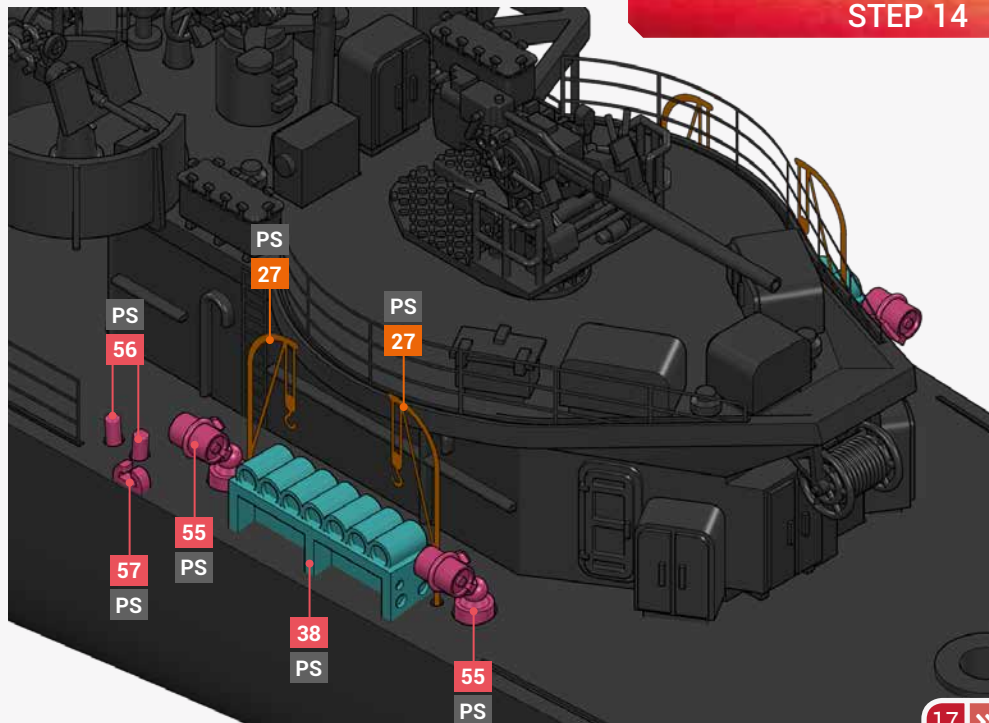



STEP 15

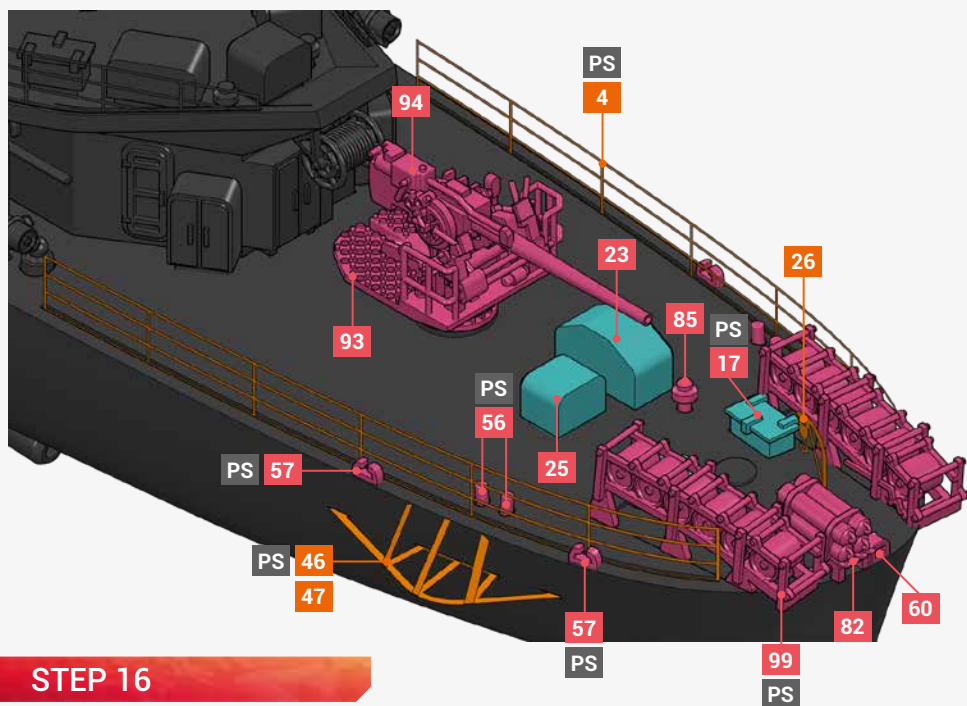

STEP 16

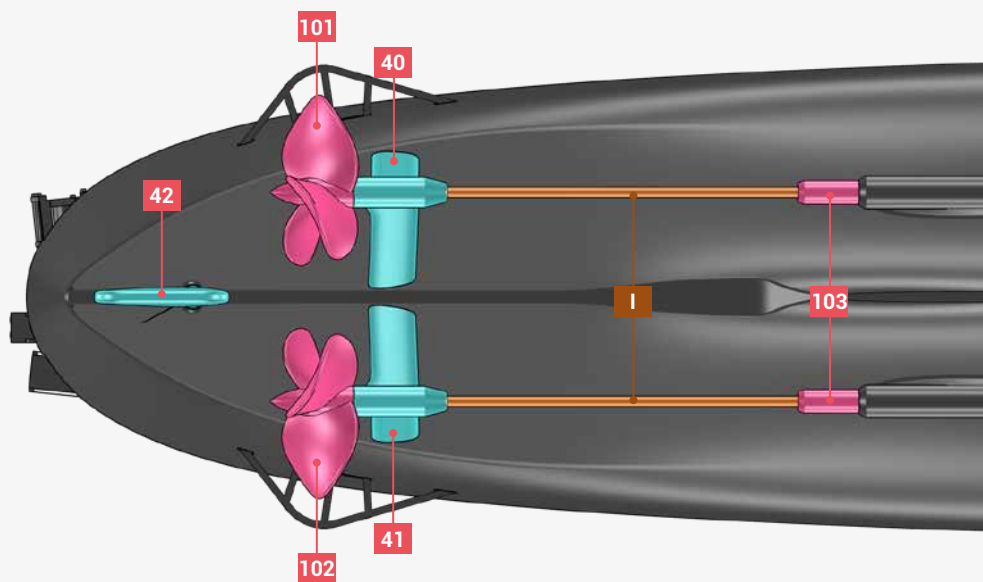

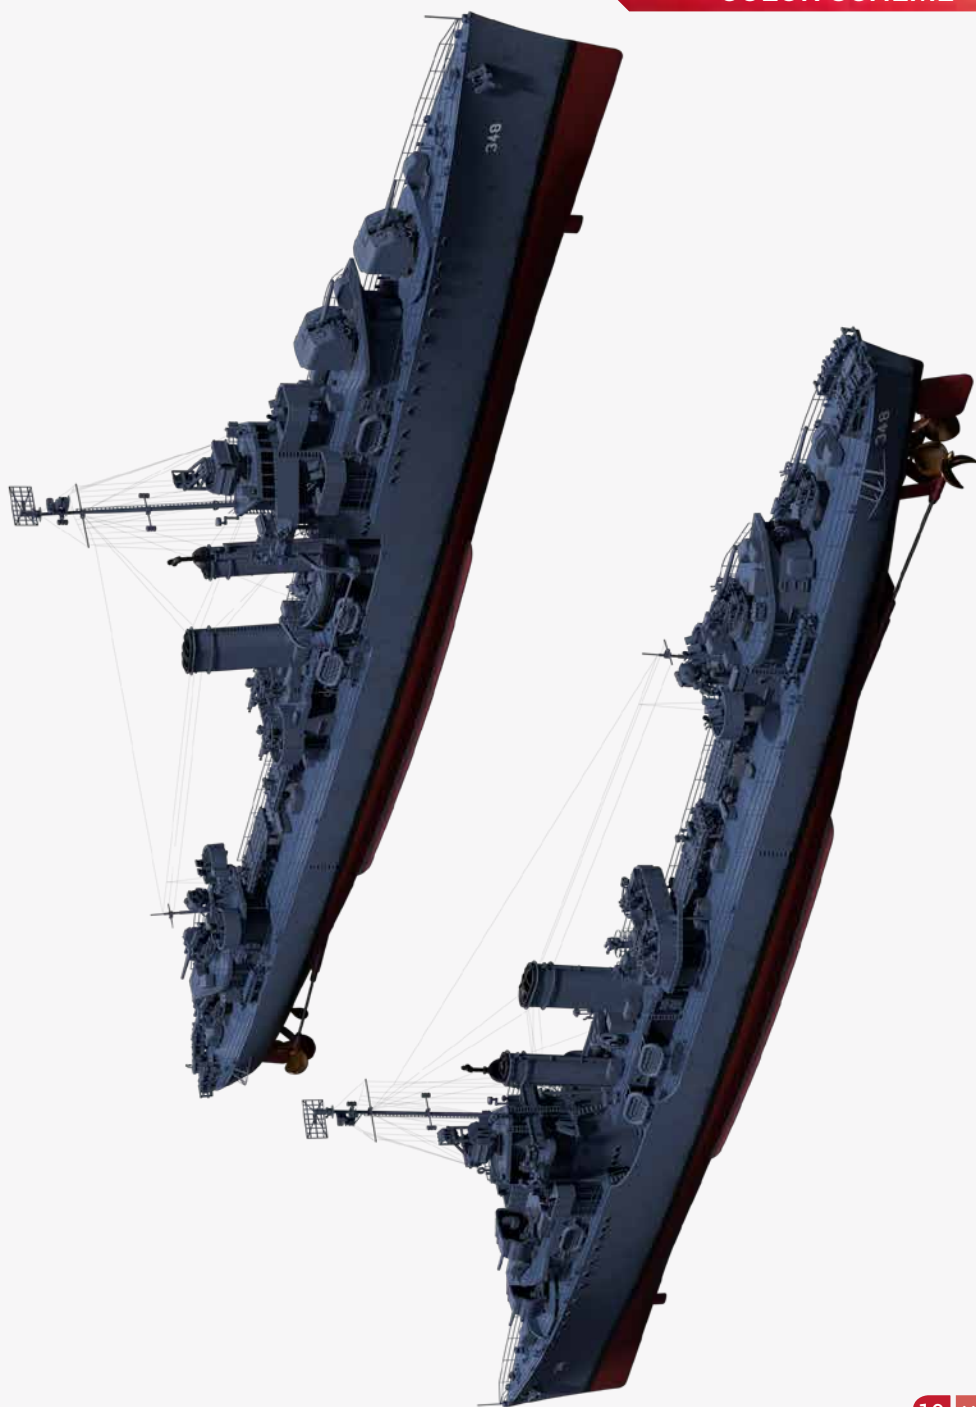

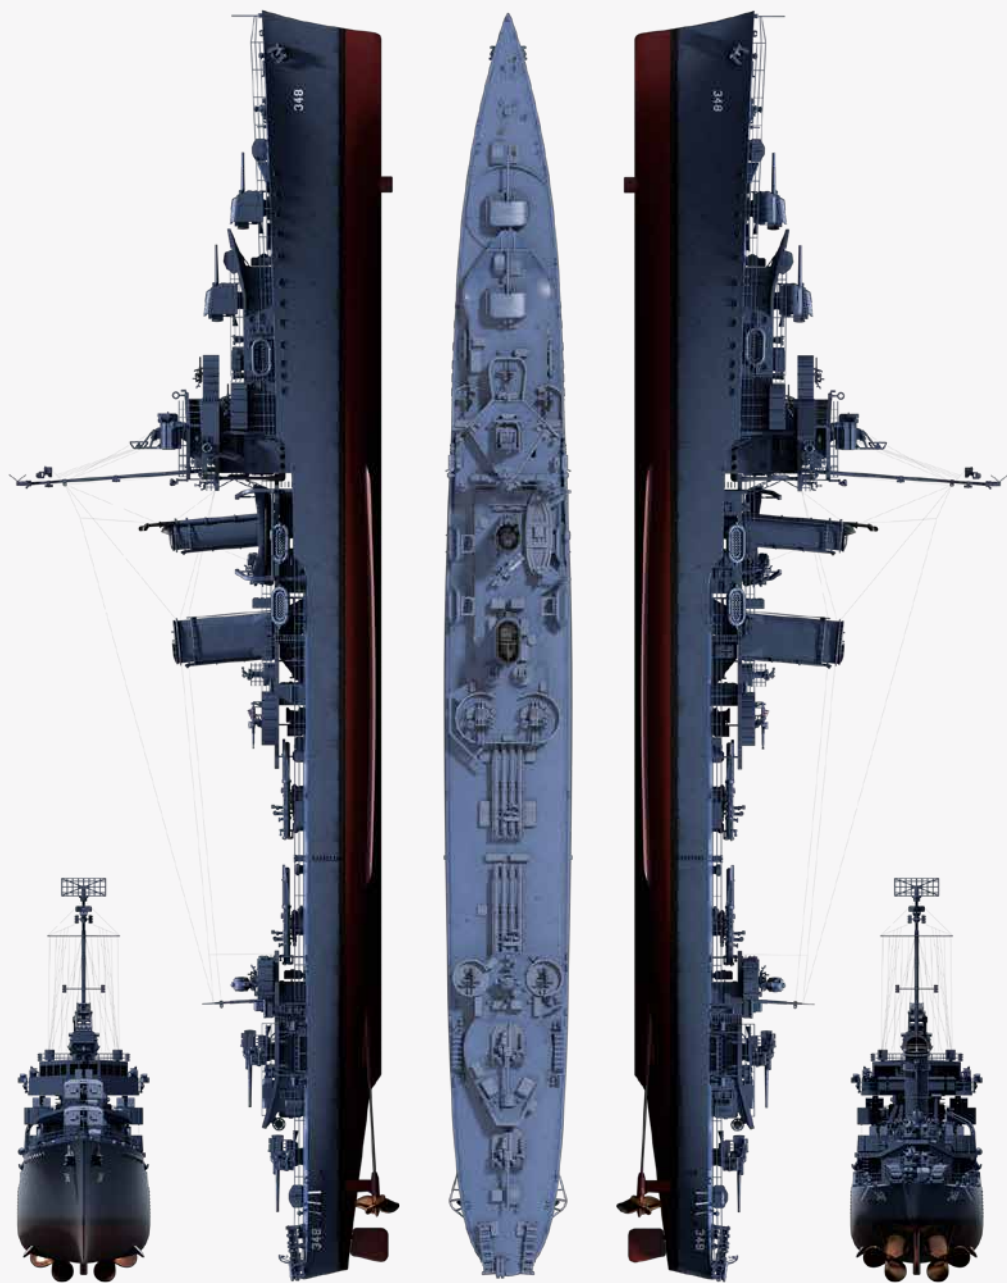

MEASURE 21

